



DS-1100KI & DS-1105KI Network Keyboard

User Manual

Legal Information

About this Document


- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

-  **HDMI**TM The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE

DS-1100KI & DS-1105KI Network Keyboard User Manual

DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Preface

This section is to ensure that you can avoid danger or property loss in the process of using the product. Before using the product, please read the user manual carefully and keep it for future reference.

Get More Information

Visit our website (<http://www.hikvision.com/>) for user manuals, application tools and development materials.

Applicable Model




This manual is applicable to DS-1100KI and DS-1105KI Network Keyboard.

Important Clause

Please strictly abide by the applicable laws and regulations for the use and maintenance of monitoring interface. It is illegal to use video monitoring device for illegal purposes, or to explore other people's privacy.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Product Introduction	1
1.1 Introduction	1
1.2 Appearance.....	2
1.2.1 1100KI Panel	2
1.2.2 1100KI Interface	5
1.2.3 1105KI Panel	7
1.2.4 1105KI Interface	10
Chapter 2 Activation.....	12
2.1 Local Menu Activation.....	12
2.2 SADP Activation.....	13
2.3 Web Activation	14
Chapter 3 Network.....	15
Chapter 4 Keyboard	16
4.1 Login.....	16
4.2 Add Devices	17
4.2.1 Manually Add	17
4.2.2 Add in Batches	19
4.3 Local Live View	20
4.3.1 Preview by Operating Touchscreen.....	20
4.3.2 Preview by Operating Keyboard Shortcut.....	20
4.3.3 PTZ Control	22
4.4 Video Wall	25
4.4.1 Video Wall Configuration.....	25
4.4.2 Video Wall Control	27
4.4.3 PTZ Control	30
4.4.4 Group and Macro	30
4.5 Playback.....	31
4.5.1 Local Playback	31
4.5.2 Video Wall Playback.....	32

4.6 Channel Management	33
4.6.1 Edit Channel	33
4.6.2 Output Channel	34
4.6.3 Camera Group	34
4.7 User Management	36
4.8 Video Recorder	38
4.8.1 Remote Panel	38
4.8.2 Live View	41
4.8.3 PTZ Control	41
4.8.4 Playback	41
4.9 Connect the Device Through Serial Ports	41
4.9.1 Connect Video Recorders	42
4.9.2 Connect Analog Matrix	43
4.9.3 Connect Analog Dome	44
Chapter 5 iSecure Mode	48
5.1 Login	48
5.2 Resource List	49
5.3 Local Live View	50
5.3.1 Enable Local Live View	50
5.3.2 PTZ Operation	50
5.4 Video Wall Operation	50
5.4.1 Region Configuration	50
5.4.2 Video Wall Control	51
5.4.3 PTZ Operation	51
5.5 Video Wall Playback	52
Chapter 6 HikCentral Mode	53
6.1 Login	53
6.2 Resource List	54
6.3 Local Live View	54
6.3.1 Enable Local Live View	54
6.3.2 PTZ Operation	55

6.4 Video Wall Operation.....	56
6.4.1 Region Configuration	56
6.4.2 Video Wall Control	56
6.4.3 PTZ Operation.....	57
6.5 Video Wall Playback.....	57
Chapter 7 System	58
7.1 Language.....	58
7.2 Hardware	58
7.3 Storage.....	59
7.3.1 FTP Storage.....	59
7.3.2 USB Storage	60
7.4 Upgrade	60
7.4.1 FTP Upgrade	60
7.4.2 USB Flash Drive Upgrade	61
7.5 Import/Export Configuration File	61
7.6 Factory Default	61
7.7 Auxiliary Key	62
7.8 Lock Keyboard	62
7.9 Joystick Sensitivity.....	62
Chapter 8 Web Configuration	63
8.1 Login.....	63
8.2 Add Devices	63
8.2.1 Manually Add	63
8.2.2 Import Input Channels in Batches	66
8.3 Channel Management.....	66
8.3.1 Edit Channel.....	66
8.3.2 Camera Group	67
8.4 Serial Port Settings	68
8.5 Network	69
8.6 System Settings	70
8.6.1 Version.....	70

8.6.2 User Management	70
8.6.3 System Maintenance	72
8.6.4 Log Management	73
8.6.5 Security Settings	74

Chapter 1 Product Introduction

1.1 Introduction

The DS-1100KI and DS-1105KI series network keyboards (hereinafter referred to as the keyboard) are equipped with a 7-inch full-view multi-touch LCD screen and a high-precision 4-axis joystick, and support network-based access to DVRs, DVSs, NVRs, network cameras, network domes, multi-functional video centers, decoders, as well as platform software such as iSecure and HikCentral. Featuring powerful functionality along with fast and easy operation, this keyboard is widely applicable across various industries, including finance, public security, telecommunications, transportation, electric power, education, and water conservancy.

Note

The DS-1100KI and DS-1105KI differ in button labeling and button count; however, the functions of the same buttons are completely identical. Since the DS-1100KI has more buttons, this document will use the DS-1100KI as an example for detailed explanation. Some operations cannot be performed on the DS-1105KI due to the absence of corresponding buttons. In such cases, additional notes will be provided alongside the relevant operations.

1.2 Appearance

1.2.1 1100KI Panel

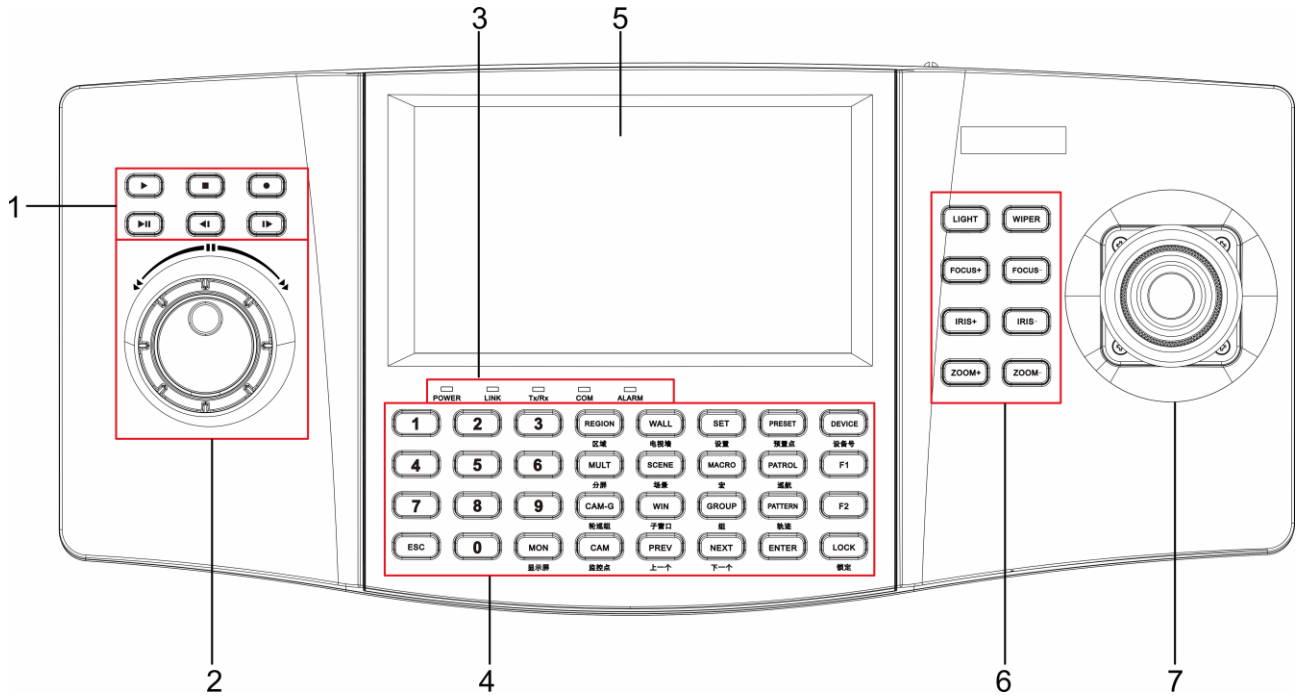


Figure 1-1 1100KI Panel

No.	Part Name	Description
1	Playback Control Buttons	: Start playback.
		: Stop playback.
		: During playback, press it to start clipping. Press it again to stop clipping.
		: Pause/resume playback.
		: During playback, press this button to jump forward 30 seconds.
		: During playback, press this button to jump backward 30 seconds.
2	Playback Shuttle	Outer shuttle: <ul style="list-style-type: none"> ● Rotate it clockwise for 2/4/8 times faster. ● Rotate it anticlockwise for 1/2, 1/4, or 1/8 times slower.

No.	Part Name	Description
		Inner shuttle: Reserved.
3	Indicators	<p>POWER indicator:</p> <ul style="list-style-type: none"> ● Solid blue: Keyboard is powered on. ● Off: Keyboard is not powered on. <p>LINK Indicator:</p> <p>Solid blue: Network port is connected with cable.</p> <p>Tx/Rx indicator:</p> <p>Flashing blue: Network port is transmitting data.</p> <p>COM indicator:</p> <p>Solid blue: Serial communication is normal.</p> <p>ALARM indicator: Reserved.</p>
4	Video Wall Control Buttons	<p>Numeric keys (0~9)</p> <p>ESC: In local live view, press this button to enter or exit full-screen mode of the live view image.</p> <p>MON: Press Number + MON</p> <ul style="list-style-type: none"> ● If the added device is a video wall or decoding device, the number represents the monitor ID. ● If the added device is a video recorder, the number represents the output channel ID. <p>REGION: Press Number + REGION to select a region. The number represents the region ID.</p> <p>MULT: Press Number + MULT to divide monitor. The number represents the sub-window quantity.</p> <p>CAM-G: Press Number + CAM-G to select a camera group. The number represents the camera group ID.</p> <p>CAM: Press Number + CAM</p> <ul style="list-style-type: none"> ● Keyboard mode: Select input channel. The number represents the input channel ID. ● iSecure/HikCentral mode: Select camera.

No.	Part Name	Description
		The number represents the camera ID.
		WALL: Press Number + WALL to select a video wall. The number represents the video wall ID (viewable in the video wall client).
		SCENE: Press Number + SCENE to switch the video wall scene of the device. The number represents the scene ID (viewable in the video wall interface).
		WIN: Press Number + WIN to select a sub-window. After the monitor is divided, the number represents the sub-window number.
		PREV
		SET: Quick access to setup mode.
		MACRO: Press Number + MACRO to select a macro. The number represents the macro ID.
		GROUP: Press Number + GROUP to select a group. The number represents the group ID.
		NEXT
		PRESET: Press Number + PRESET to set or call a preset.
		PATROL: Press Number + PATROL to set or call a patrol.
		PATTERN: Press Number + PATTERN to set or call a pattern.
		ENTER: After pressing a numeric key, press this button to confirm.
		DEVICE: Press Number + DEVICE to select a device. The number represents the device ID (viewable in the device management interface).
		F1: Auxiliary button, configurable as two-way audio or enlarge/restore sub-window.
		F2: Auxiliary button, configurable as two-way audio or enlarge/restore sub-window.
		LOCK

No.	Part Name	Description
5	Touchscreen	Display the keyboard's local interface and support touch operation.
6	PTZ Control Buttons	LIGHT: Turn PTZ light on/off.
		FOCUS+: Increase focus.
		IRIS+: Increase iris.
		ZOOM+: Zoom in.
		WIPER: Turn PTZ wiper on/off.
		FOCUS-: Decrease focus.
		IRIS-: Decrease iris.
7	Joystick	<ul style="list-style-type: none"> Controls PTZ movement. During live view and playback, press the button on top of the joystick to capture images.

1.2.2 1100KI Interface

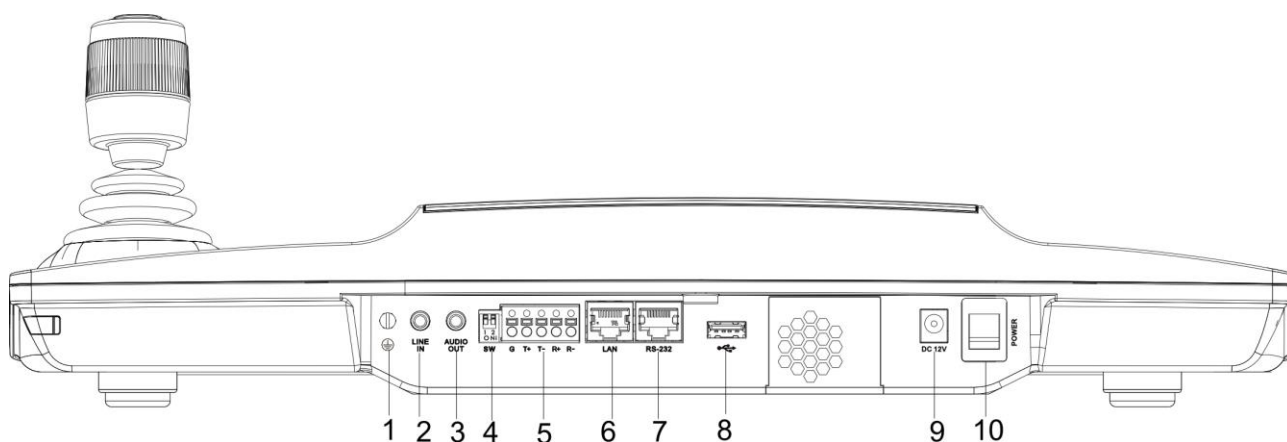


Figure 1-2 1100KI Interface

No.	Interface Name	Description
1	Grounding point	Connect the ground wire.
2	Audio Input Interface (LINE IN)	Connect the audio input cable.
3	Audio Output Interface (AUDIO OUT)	Connect the audio output cable.
4	Resistor Matching Switch of the	Push down the switch to turn on resistor

No.	Interface Name	Description
	RS-485 Interface (SW)	matching. Push up the switch to turn off resistor matching.
5	RS-485 Interface	G: Connect the ground wire. T- and T+: Connect the external device that supports RS-485 protocol, such as speed dome and NVR. R- and R+: Connect the T- and T+ interfaces of another keyboard for keyboard cascade.
6	Gigabit Auto-Negotiation Interface (LAN)	Connect the Gigabit Ethernet cable.
7	RS-232 Interface	Connect the video conference camera that supports RS-232 protocol.
8	USB 2.0 Interface	Connect a USB drive formatted in FAT32.
9	12 VDC Power Supply Interface	Connect the power cord.
10	Power Switch	Press the switch to power on the keyboard.

 **Note**

RS-232 interface uses the RJ-45 jack, whose pins 2, 3, and 7 represent RX, TX, and GND. When inserting an RJ-45 connector into the RS-232 interface, make sure RX, TX, and GND lines of the RS-232 interface are connected to TX, RX, and GND lines of the RJ-45 connector.

1.2.3 1105KI Panel

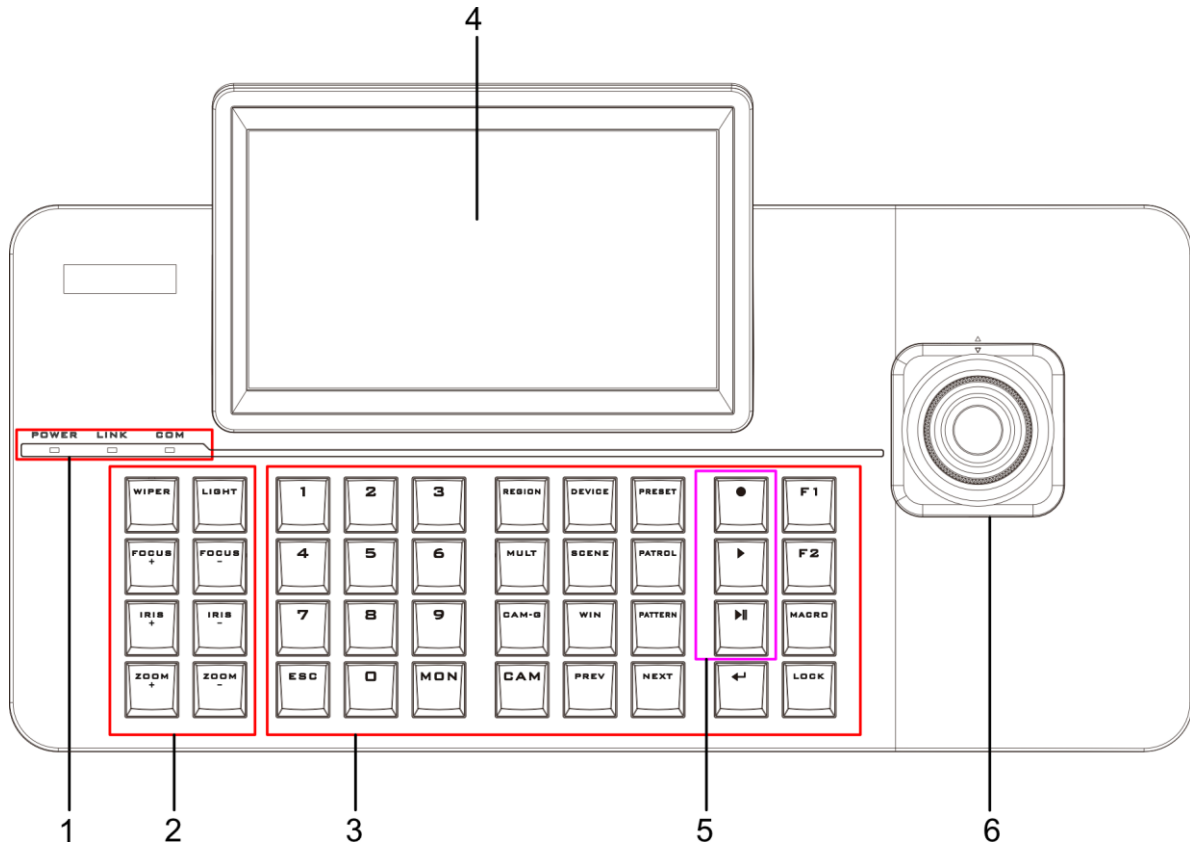






Figure 1-3 1105KI Panel

No.	Part Name	Description
1	Indicators	POWER indicator: <ul style="list-style-type: none"> ● Solid blue: Keyboard is powered on. ● Off: Keyboard is not powered on.
		LINK Indicator: Solid blue: Network port is connected with cable.
		COM indicator: Solid blue: Serial communication is normal.
2	PTZ Control Buttons	WIPER: Turn PTZ wiper on/off.
		FOCUS+: Increase focus.
		IRIS+: Increase iris.
		ZOOM+: Zoom in.

No.	Part Name	Description
		LIGHT: Turn PTZ light on/off. FOCUS-: Decrease focus. IRIS-: Decrease iris. ZOOM-: Zoom out.
3	Video Wall Control Buttons	Numeric keys (0~9) ESC: <ul style="list-style-type: none"> ● In local live view, press this button to enter or exit full-screen mode of the live view image. ● During playback, press this button to stop playback. MON: Press Number + MON <ul style="list-style-type: none"> ● If the added device is a video wall or decoding device, the number represents the monitor ID. ● If the added device is a video recorder, the number represents the output channel ID. REGION: Press Number + REGION to select a region. The number represents the region ID. MULT: Press Number + MULT to divide monitor. The number represents the sub-window quantity. CAM-G: Press Number + CAM-G to select a camera group. The number represents the camera group ID. CAM: Press Number + CAM <ul style="list-style-type: none"> ● Keyboard mode: Select input channel. The number represents the input channel ID. ● iSecure/HikCentral mode: Select camera. The number represents the camera ID. DEVICE: Press Number + DEVICE to select a device. The number represents the device ID (viewable in the device management interface). SCENE: Press Number + SCENE to switch the video wall scene of the device. The number represents the scene ID (viewable in the

No.	Part Name	Description
		<p>video wall interface).</p> <p>WIN: Press Number + WIN to select a sub-window. After the monitor is divided, the number represents the sub-window number.</p> <p>PREV</p> <p>PRESET: Press Number + PRESET to set or call a preset.</p> <p>PATROL: Press Number + PATROL to set or call a patrol.</p> <p>PATTERN: Press Number + PATTERN to set or call a pattern.</p> <p>NEXT</p> <p>: After pressing a numeric key, press this button to confirm.</p> <p>F1: Auxiliary button, configurable as two-way audio or enlarge/restore sub-window.</p> <p>F2: Auxiliary button, configurable as two-way audio or enlarge/restore sub-window.</p> <p>LOCK</p> <p>MACRO: Press Number + MACRO to select a macro. The number represents the macro ID.</p>
4	Touchscreen	Display the keyboard's local interface and support touch operation.
5	Playback Control Buttons	<p>: Start playback.</p> <p>: During playback, press it to start clipping. Press it again to stop clipping.</p> <p>: Pause/resume playback.</p>
6	Joystick	<ul style="list-style-type: none"> ● Controls PTZ movement. ● During live view and playback, press the button on top of the joystick to capture images.

1.2.4 1105KI Interface

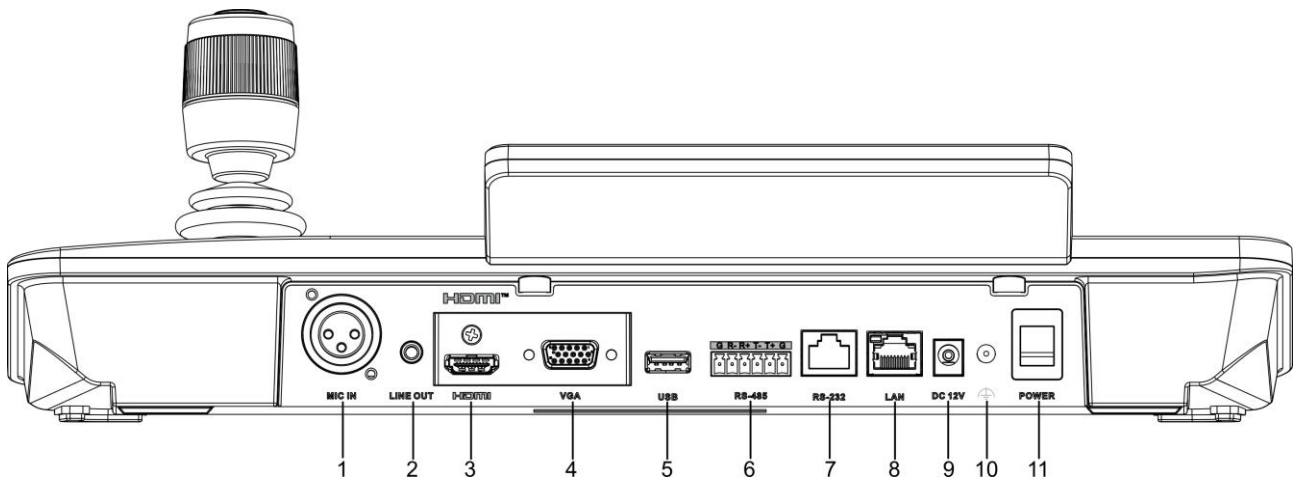


Figure 1-4 1105KI Interface

No.	Interface Name	Description
1	Cannon Microphone Input Interface (MIC IN)	Connect the microphone.
2	Audio Output Interface (LINE OUT)	Connect the audio output cable.
3	HDMI Interface	Use the HDMI cable to connect the monitor.
4	VGA Interface	Use the VGA cable to connect the monitor.
5	USB 2.0 Interface	Connect a USB drive formatted in FAT32.
6	RS-485 Interface	G: Connect the ground wire. T- and T+: Connect the external device that supports RS-485 protocol, such as speed dome and NVR. R- and R+: Connect the T- and T+ interfaces of another keyboard for keyboard cascade.
7	RS-232 Interface	Connect the video conference camera that supports RS-232 protocol.
8	Gigabit Auto-Negotiation Interface (LAN)	Connect the Gigabit Ethernet cable.
9	12 VDC Power Supply	Connect the power cord.
10	Grounding point	Connect the ground wire.
11	Power Switch	Press the switch to power on the keyboard.

 **Note**

RS-232 interface uses the RJ-45 jack, whose pins 2, 3, and 7 represent RX, TX, and GND. When inserting an RJ-45 connector into the RS-232 interface, make sure RX, TX, and GND lines of the RS-232 interface are connected to TX, RX, and GND lines of the RJ-45 connector.

Chapter 2 Activation

You can activate network keyboard via local menu, SADP client or Web interface.

2.1 Local Menu Activation

For the first-time access, you need to activate the network keyboard by setting an admin password.

Steps

1. Connect your network keyboard power supply to an electrical outlet, and turn on the network keyboard.
The activation interface will be popped up automatically.
2. Set password and confirm it.

Caution

- Passwords are divided into 4 types: digits, lowercase letters, uppercase letters, and special symbols. Passwords are classified into 4 levels:
 - Level 0 (risky password): password length < 8 or only one type of character.
 - Level 1 (weak password): password length ≥ 8 and two types of characters. The character combination includes digits + lowercase letters and digits+ upper case letters.
 - Level 2 (medium password): password length ≥ 8 and two types of characters. The character combination cannot be digits + lowercase letters or digits+ upper case letters.
 - Level 3 (strong password): password length ≥ 8 and three types of characters.
 - Do not use the risky passwords. To better protect your product, reset your password regularly.
 - The password cannot contain the user name in the forward order and backward order (when the user name length is more than 3), 123, admin (case insensitive), a string of at least four consecutive digits (such as 1234, 12345, 4321, etc.), a string of at least four repeating characters (such as 1111, 8888, aaaa, etc.).
 - The password cannot be 1qaz2wsx, 1qaz@WSX, !@#\$QWER, p@ssword, passw0rd, or p@ssw0rd.
-

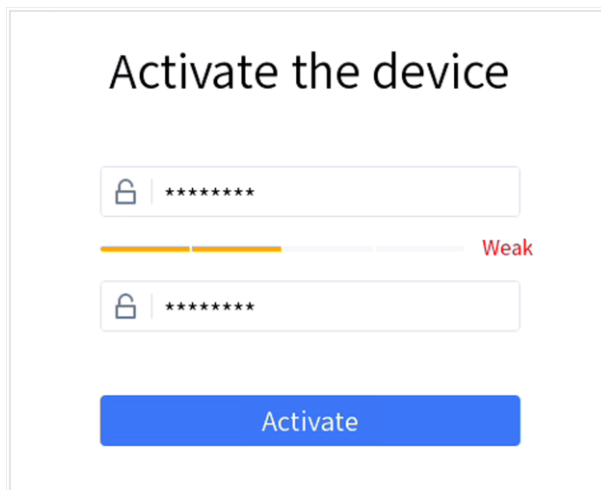


Figure 2-1 Activation

3. Tap **Activate**.

2.2 SADP Activation

SADP software is used for detecting the online device, activating the device, and resetting its password.

Get the SADP software from the supplied disk or the official website, and install the SADP according to the prompts.

Steps

1. Connect your network keyboard power supply to an electrical outlet, and turn on the network keyboard.
2. Run the SADP software downloaded from our website to search the online devices.
3. Check the keyboard status from the device list, and select the inactive keyboard.
4. Enter the new password in the password field, and confirm it.

Caution

- Passwords are divided into 4 types: digits, lowercase letters, uppercase letters, and special symbols. Passwords are classified into 4 levels:
 - Level 0 (risky password): password length < 8 or only one type of character.
 - Level 1 (weak password): password length ≥ 8 and two types of characters. The character combination includes digits + lowercase letters and digits+ upper case letters.
 - Level 2 (medium password): password length ≥ 8 and two types of characters. The character combination cannot be digits + lowercase letters or digits+ upper case letters.
 - Level 3 (strong password): password length ≥ 8 and three types of characters.

- Do not use the risky passwords. To better protect your product, reset your password regularly.
 - The password cannot contain the user name in the forward order and backward order (when the user name length is more than 3), 123, admin (case insensitive), a string of at least four consecutive digits (such as 1234, 12345, 4321, etc.), a string of at least four repeating characters (such as 1111, 8888, aaaa, etc.).
 - The password cannot be 1qaz2wsx, 1qaz@WSX, !@#\$QWER, p@ssword, passw0rd, or p@ssw0rd.
-

5. Click **Activate**.

2.3 Web Activation

After editing the PC and the network keyboard to the same network segment, you can directly log in to the web interface of the network keyboard to activate.

Chapter 3 Network

Network parameters must be properly configured before you can add network devices and operate the network keyboard over network.

Steps

1. Go to **System** → **Network**.
2. Configure network parameters.
 - Enable **DHCP** to obtain IP settings automatically.
 - Manually enter IP address, subnet mask, and gateway.
 - Enable **SADP** to search devices, change IP addresses through SADP software.
3. Tap **Save**.

The screenshot shows a configuration interface with the following elements:

- DHCP**: A toggle switch that is currently turned off (grey).
- IP Address**: A text input field containing the value 192.168.1.100.
- Subnet Mask**: A text input field containing the value 255.255.255.0.
- Gateway**: A text input field containing the value 192.168.1.1.
- MAC Address**: A text input field containing the value 00:0C:29:00:00:00.
- SSH**: A toggle switch that is currently turned off (grey).
- SADP**: A toggle switch that is currently turned on (green).
- Save**: A blue button located at the bottom right of the form.

Figure 3-1 Network Parameters


Chapter 4 Keyboard

Keyboard mode is mainly applied to small-sized projects. Network keyboard works as a control center and manages security devices in it.

4.1 Login

Steps

1. Tap **Keyboard** at home page.

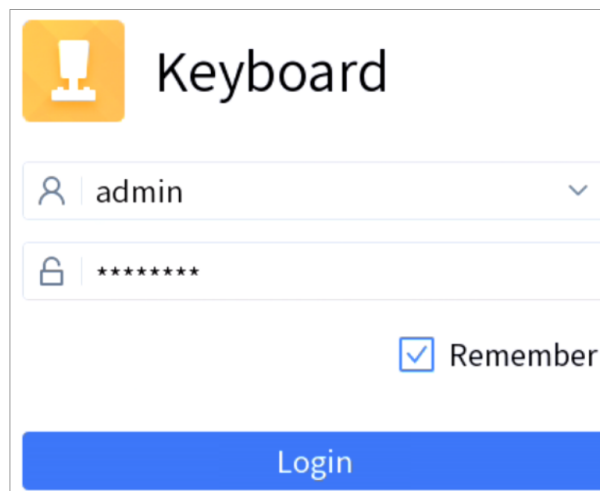

The screenshot shows a login interface for a device named 'Keyboard'. At the top left is an orange icon of a keyboard. To its right is the word 'Keyboard' in a large, dark font. Below this is a user selection dropdown menu showing 'admin' with a person icon and a downward arrow. Underneath is a password field with a lock icon and seven asterisks. To the right of the password field is a checkbox labeled 'Remember' which is checked. At the bottom is a prominent blue button with the text 'Login' in white.

Figure 4-1 Login

2. Enter user name and password.
3. Optional: Check **Remember**.
4. Tap **Login**.

Note

If you enter the wrong password 7 times for administrator or 5 times for operator, the current user account will be locked for 30 minutes.


4.2 Add Devices

Up to 4000 devices can be added.

4.2.1 Manually Add

Steps

1. Go to **Keyboard** → **Device**.

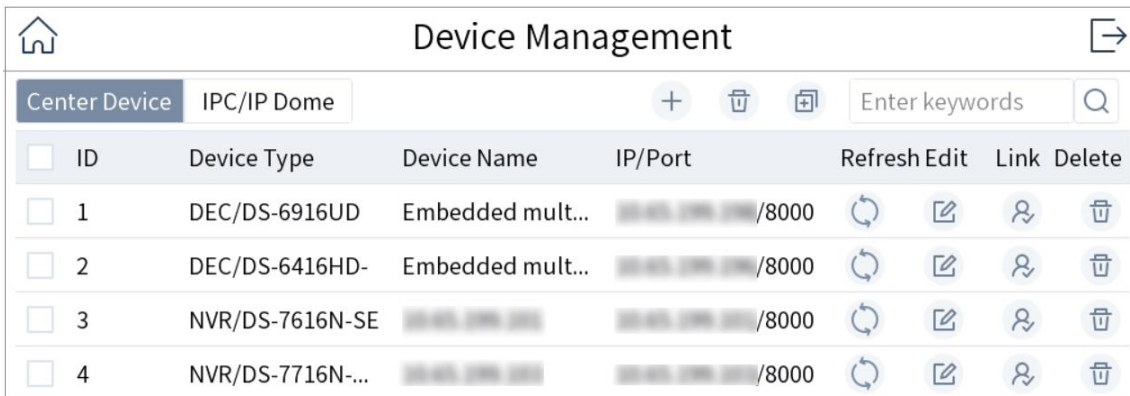

<input type="checkbox"/>	ID	Device Type	Device Name	IP/Port	Refresh	Edit	Link	Delete
<input type="checkbox"/>	1	DEC/DS-6916UD	Embedded mult...	192.168.1.100/8000				
<input type="checkbox"/>	2	DEC/DS-6416HD-	Embedded mult...	192.168.1.100/8000				
<input type="checkbox"/>	3	NVR/DS-7616N-SE	192.168.1.100	192.168.1.100/8000				
<input type="checkbox"/>	4	NVR/DS-7716N-...	192.168.1.100	192.168.1.100/8000				

Figure 4-2 Device Management

2. Tap **Center Device** or **IPC/IP Dome** as desired.
3. Tap .
4. Enter device IP address, port, user name, and password.

Note

- The device name is obtained automatically or can be configured as required.
- If you enable the stream encryption for the device, you need to enter the verification code when adding the device.

5. Check or uncheck **Add Video Recorder Output**.

Note

Check **Add Video Recorder Output**, and the output port type, channel number and other information will be listed in the output port list.

6. Tap **OK**.

Add Center Device

ID	<input type="text"/>
Device	<input type="text"/>
IP*	<input type="text" value="192.168.1.10"/>
Port*	<input type="text" value="8000"/>
User*	<input type="text" value="admin"/>
Password*	<input type="password"/>
Code	<input type="text"/>
<input type="checkbox"/>	Add Video Recorder Output (Not Recommended).
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Figure 4-3 Add Center Device

Add IPC Device

Device	<input type="text"/>
IP*	<input type="text" value="192.168.1.10"/>
Port*	<input type="text" value="8000"/>
User*	<input type="text" value="admin"/>
Password*	<input type="password"/>
Code	<input type="text"/>
Protocol*	<input type="button" value="Default"/> <input type="button" value="ONVIF"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Figure 4-4 Add Network Camera

4.2.2 Add in Batches

Add Online Devices in Batches

You can add the devices with the same user name and password in batches.

Steps

1. Go to **Keyboard** → **Device**.

ID	Device Type	Device Name	IP/Port	Refresh	Edit	Link	Delete
1	DEC/DS-6916UD	Embedded mult...	192.168.1.100/8000				
2	DEC/DS-6416HD-	Embedded mult...	192.168.1.100/8000				
3	NVR/DS-7616N-SE	192.168.1.100	192.168.1.100/8000				
4	NVR/DS-7716N-...	192.168.1.100	192.168.1.100/8000				

Figure 4-5 Device Management

2. Tap to enter **Add by SADP** interface.

Device Name	IP Address	Port	Add
DS-7608N-Q1/1T	192.168.1.100	8000	
iDS-9632NX-I8/X	192.168.1.100	8000	
DS-8104LHFH-E2/RTJ	192.168.1.100	8000	
iDS-8108LHFH-K2	192.168.1.100	8000	
DS-2CD4112F-I	192.168.1.100	8000	

Figure 4-6 Online Devices

3. Check the devices to be added and tap .
4. Enter user name and password.
5. Tap **Add**.

Import Input Channels in Batches



The information of added input channel can be generated into an excel file and exported to the

USB flash drive for backup.

Before You Start

Connect an USB flash drive to the network keyboard.

Steps


1. Go to **Keyboard** → **Channel**.
2. Export input channel template.
 - 1) Tap  to export an excel file.
 - 2) Edit the file on your computer, like adding or deleting input channels.
 - 3) Copy the file to an USB flash drive and connect it to your network keyboard.
3. Tap  to import input channels.

4.3 Local Live View

Preview an input channel in keyboard touchscreen.

4.3.1 Preview by Operating Touchscreen


Steps

1. Go to **Keyboard** → **Channel**.
2. Select the channel and tap  to preview.

4.3.2 Preview by Operating Keyboard Shortcut

Press the keys of the keyboard to preview the input channel.

Steps

1. Press **0+MON**.
2. Preview the channel as desired.
 - Press **Num + CAM** to preview the signal of the corresponding channel.
 - Press **Num + CAM-G** to preview the camera group.
 - Tap  in the touchscreen and select the channel or the camera group as desired to preview.

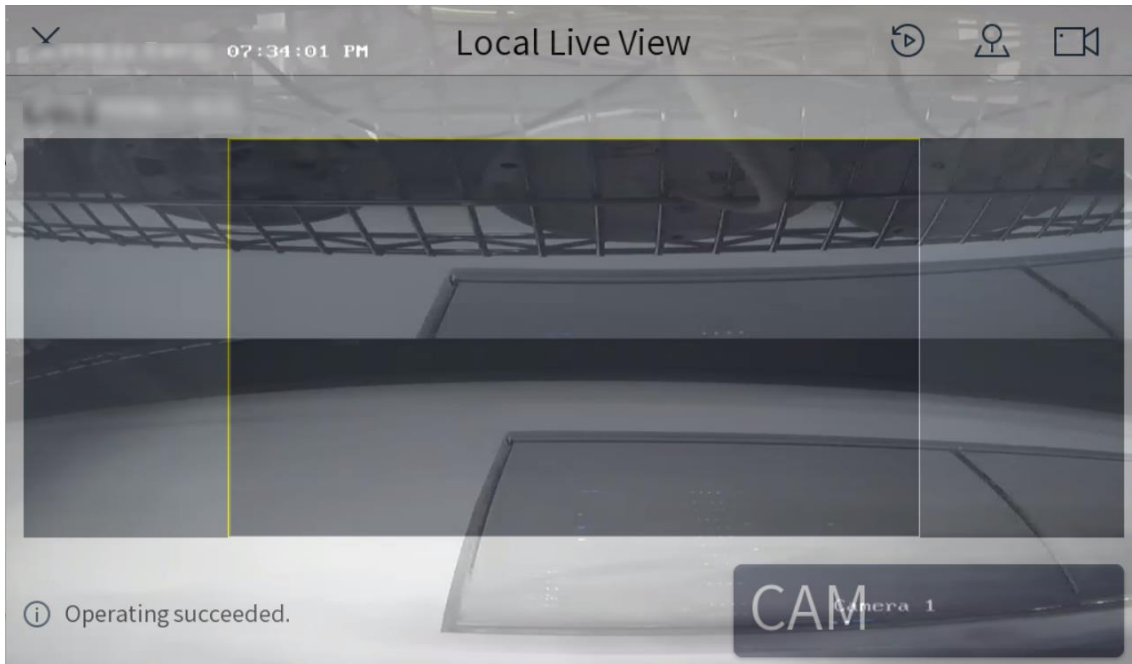



Figure 4-7 Local Live View

3. You can do the following operations.

- | | |
|-------------------------|--|
| 4-Screen Preview | <ul style="list-style-type: none">● Press 4 + MULT to switch the current image into 4 screens, and tap any screen to preview the images of different cameras.● Press 1 + MULT to return the previous image. |
| Switch Channels | Press PREV/NEXT to switch to the previous or next channel. |
| Full Screen | Press ESC to switch to the full screen. |
| Capture Images | Press the top of the rocker to capture a image. |
| Clip Videos | Press  to start clipping and press it again to stop clipping. |

4. Press **0+CAM** to stop previewing.

 **Note**

- You can preview the channel with up to 4K resolution.
 - Press **Num + CAM** to control PTZ without previewing images from speed domes.
 - The captured image and the recording can be saved in USB flash drive or uploaded to FTP server. For FTP configuration, see **Storage**.
 - After 5 seconds of inactivity, the screen will display only the video content, hiding all elements of the local live view interface. Tap the screen or press any key to restore the local live view.
-

4.3.3 PTZ Control

You can control the added speed dome. For example, you can control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease focus, increase/decrease iris, and set/call preset, patrol and pattern.

General Operation

Steps

1. Preview speed dome image.



For detailed steps, see [**Preview by Operating Touchscreen**](#) and [**Preview by Operating Keyboard Shortcut**](#).

2. Move joystick and press buttons of keyboard to control PTZ.

Table 4-1 Buttons Description



Button	Description	Button	Description
LIGHT	Turn on/off light.	WIPER	Turn on/off wiper.
FOCUS+	Increase focus.	FOCUS-	Decrease focus.
IRIS+	Increase iris.	IRIS-	Decrease iris.
ZOOM+	Zoom in.	ZOOM-	Zoom out.
PRESET	Set/call preset.	PATROL	Set/call patrol.
PATTERN	Set/call pattern and start/stop auto-scan.	Joystick	Rotate PTZ.

Set and Call Preset

You can record the horizontal positions, vertical positions, and lens magnification of the preset point by setting a preset point. To quickly monitor a certain target, you can call out the preset position by operating the keyboard.

By Operating Touchscreen

1. Preview speed dome image. For detailed steps, see [**Preview by Operating Touchscreen**](#) and [**Preview by Operating Keyboard Shortcut**](#).
2. Set a preset.
 - 1) Tap .
 - 2) Tap **Preset**.

- 3) Rotate the joystick to move PTZ to a desired position.
 - 4) Tap  to set a preset.
3. Tap  to call the preset.




By Operating Keyboard Shortcut

1. Preview speed dome image. For detailed steps, see [**Preview by Operating Touchscreen**](#) and [**Preview by Operating Keyboard Shortcut**](#).
2. Rotate the joystick to move PTZ to a desired position.
3. Set a preset.
 - 1) Press **SET** to start setting. The SET button turns red.
 - 2) Press **Num + PRESET** to set the current position as corresponding preset.
 - 3) Press **SET** to finish setting.
4. Press **Num + PRESET** to call the preset.

Set and Call Patrol

Patrol means that PTZ moves among several presets. PTZ will stay in a preset for a duration before moving on to the next preset.

By Operating Touchscreen

1. Preview speed dome image. For detailed steps, see [**Preview by Operating Keyboard Shortcut**](#) and [**Preview by Operating Touchscreen**](#).
2. Set a patrol.
 - 1) Tap .
 - 2) Tap **Patrol**.
 - 3) Tap  of a desired patrol.
 - 4) Tap **Add Preset** to add presets, including their speed and duration time, in the patrol.
 - 5) Tap **OK**.
3. Tap  to call the patrol.

By Operating Keyboard Shortcut

1. Preview speed dome image. For detailed steps, see [**Preview by Operating Keyboard Shortcut**](#) and [**Preview by Operating Touchscreen**](#).
2. Press **SET** to start setting.
The SET button turns red.
3. Press **Num + PATROL** to select which patrol to set.

Preset

It determines the order at which the PTZ will follow while moving through the patrol.

Speed

It defines the speed at which the PTZ will move from one preset to the next.

Duration

It refers to the time span to stay at the preset.

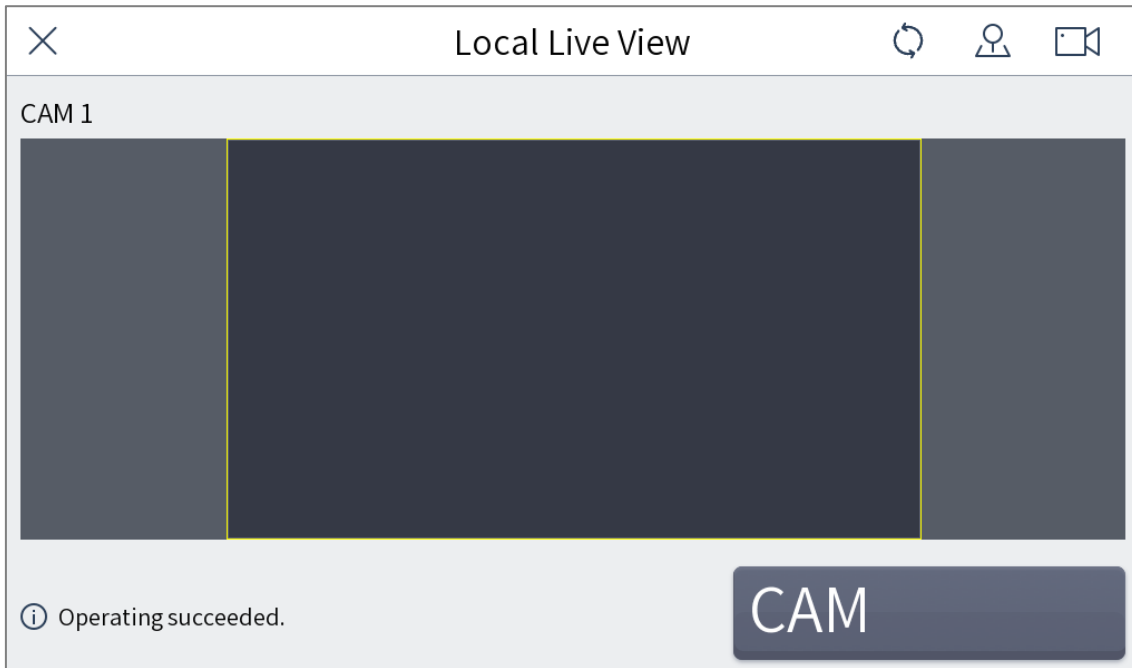


Figure 4-8 Edit Patrol

4. Press **Num + ENTER** to select preset.
5. Press **Num + ENTER** to set duration.
6. Press **Num + ENTER** to set speed.

Note

If you press **Num + PATROL** during steps 4 to 6, the settings will be cleared.

7. Repeat steps 4 to 6 to set more points of the patrol.
8. Press **SET** to finish setting.

Note

Press **Num + PATROL** again to clear all parameters set. Press **SET** to reset.

9. Press **Num + PATROL** to call the patrol.

Note





You can also tap  in **Local Live View** interface to select **Patrol**, set and call patrol.

Set and Call Pattern

Pattern records the movement of the PTZ. You can call the pattern to automatically move the PTZ according to the predefined path.

By Operating Touchscreen

1. Preview speed dome image. For detailed steps, see [Preview by Operating Touchscreen](#) and [Preview by Operating Keyboard Shortcut](#).

2. Set a pattern.
 - 1) Tap .
 - 2) Tap **Pattern**.
 - 3) Tap  of a desired pattern.
 - 4) Tap **OK**.
 - 5) Rotate the joystick to control PTZ. The movement will be recorded.
 - 6) Tap  to save the pattern.
3. Tap  to call the pattern.

By Operating Keyboard Shortcut

1. Preview speed dome image. For detailed steps, see [Preview by Operating Touchscreen](#) and [Preview by Operating Keyboard Shortcut](#).
2. Press **SET** to start setting.
The SET button turns red.
3. Press **Num + PATTERN** to select a pattern to set.
4. Rotate the joystick to control PTZ. The movement will be recorded.
5. Press **SET** to stop setting.
6. Press **Num + PATTERN** to call the pattern.

Note

You can also tap  in **Local Live View** interface to select **Pattern**, set and call pattern.

4.4 Video Wall


4.4.1 Video Wall Configuration

Configure Region

Divide a video wall into several regions to manage video wall by region.

Steps

1. Go to **Keyboard** → **Region**.

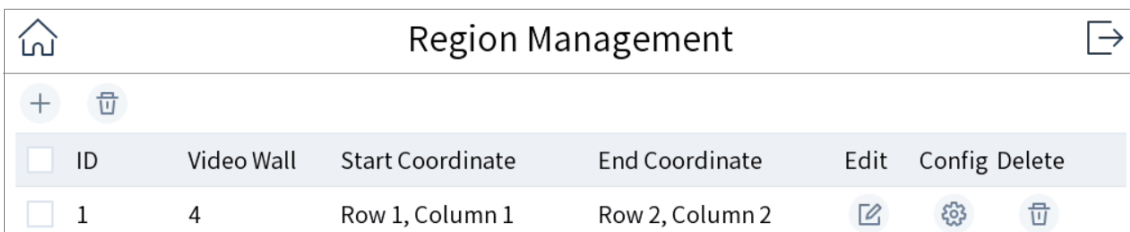




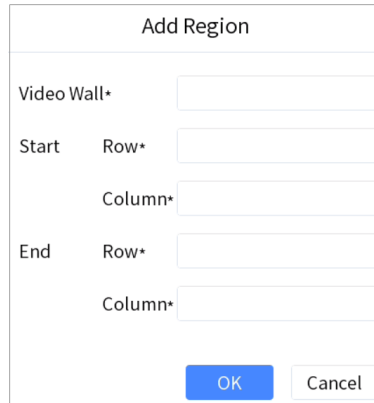
ID	Video Wall	Start Coordinate	End Coordinate	Edit	Config	Delete
1	4	Row 1, Column 1	Row 2, Column 2			

Figure 4-9 Region Management

2. Tap .



The 'Add Region' dialog box contains the following fields and buttons:

- Video Wall* [input field]
- Start Row* [input field]
- Column* [input field]
- End Row* [input field]
- Column* [input field]
- OK button
- Cancel button

Figure 4-10 Add Region

3. Enter video wall ID, start coordinate, and end coordinate.
4. Tap **OK**.

 **Note**

- Up to 16 regions can be added.
 - Region size cannot be larger than 6 × 8 (row × column).
-

Link Output Channel to Video Wall

Steps

1. Tap  of region to configure.

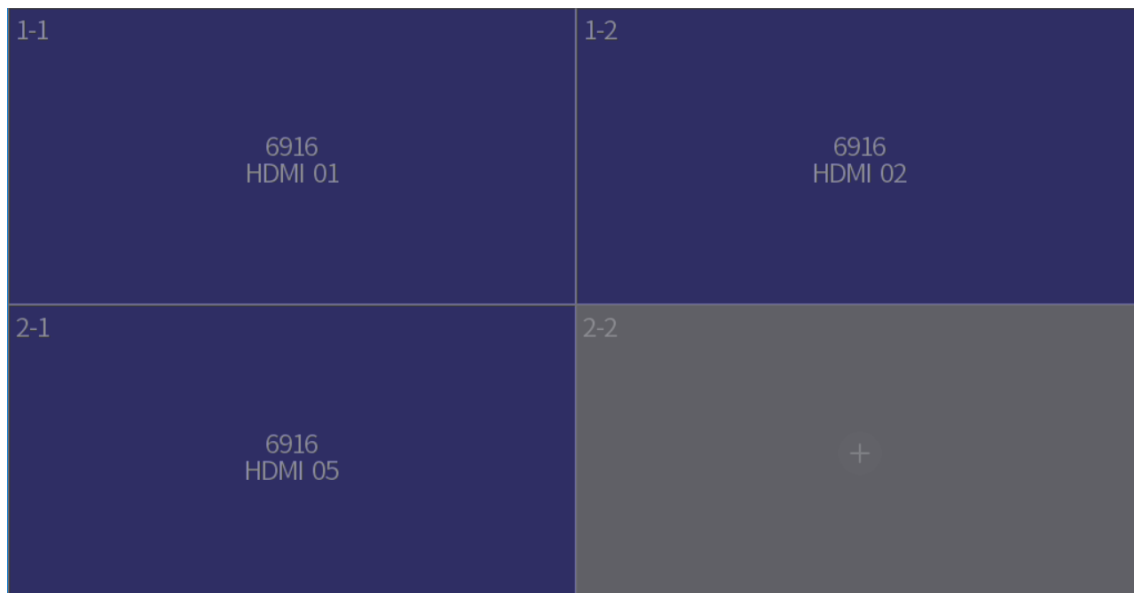



Figure 4-11 Region Configuration

2. Tap  of a grid.
3. Select a decoding device and select its output channel.

4. Tap **OK** to finish setting.

 **Note**

Region output channel layout should be the same with the actual video wall.

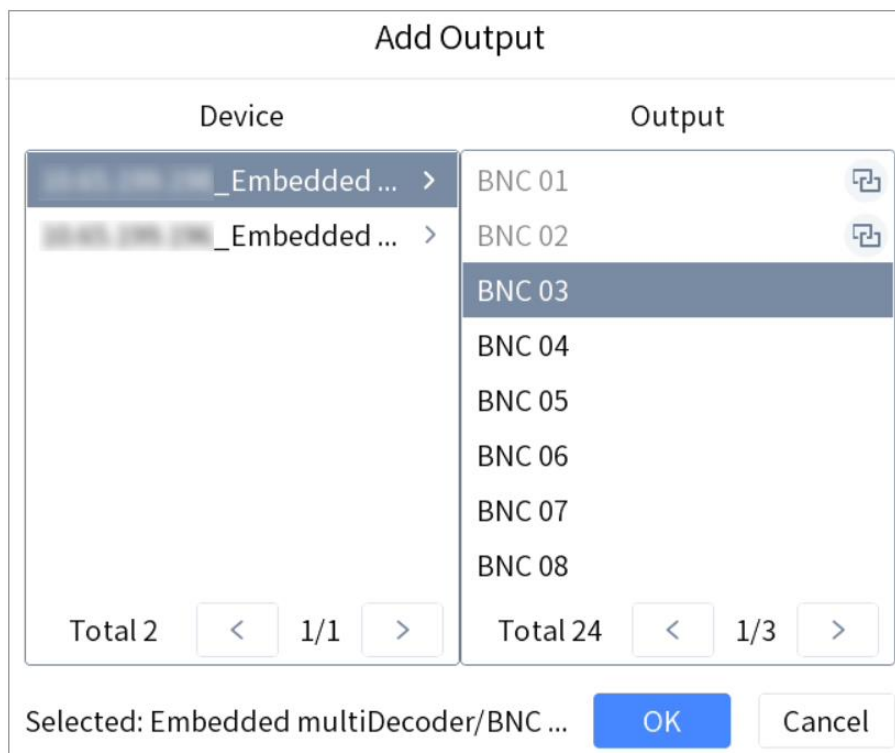


Figure 4-12 Add Output

4.4.2 Video Wall Control

Layout Operation


Select a monitor to open, close, resize, and divide windows.

Steps

1. Press **Num + REGION**, or press **Num + WALL**.
2. Tap to select a monitor.
3. Operate the window as desired.

Open window Press **Num + CAM** or **Num + CAM-G** to display an input channel or camera group on the monitor.

Window roaming Long press a window, and you can move it.

Close window	Long press a window, and tap  to close the window.
Resize window	<ul style="list-style-type: none">● Double tap a window to expand it to cover all the grids it overlays. Double tap the window again to restore it to the previous size.● Drag the four corners of the window to resize the window.
Divide window	Press Num + MON and press Num + MULT to divide the window.
Expand/restore sub-window	Press Num + MON , press Num + WIN to select a sub-window, and press F2 to expand the sub-window to cover the whole monitor. Press F2 again to restore the sub-window.

Window Operation

Display an input channel or camera group on a monitor.

Steps

1. Select a monitor to display. Three methods are provided. You are recommended to use the first one.
 - Press **Num + REGION** to show monitors on the region and video wall layout.
 - Press **Num + MON**. Or tap to select a monitor.
 - Press **Num + DEVICE**.


Note

You can check the device number in **Device Management** interface.

- Press **Num + WALL**. For roaming devices, WALL refers to video wall. For decoder, WALL refers to spliced screen.
-


Note

- For the roaming device supporting one video wall, always keyboard selects the number 1 video wall, whatever the Num is.
 - For the roaming device supporting multiple video walls, select the corresponding video wall.
 - For the device supporting spliced screen, select the corresponding joined screen.
-

- Press **Num + MON**. Or tap to select a monitor. Press **Num + MON**: Select a monitor directly.
2. Select an input channel or camera group to preview.
 - Press **Num + CAM** to preview the input channel.
 - Press **Num + CAM-G** to preview the camera group.
 - Tap  on the upper right corner of the touchscreen and select an input channel to preview.
 3. During live view, you can switch live view input channel, capture images, and clip videos.

Switch Channels Press **PREV/NEXT** to switch to previous/next online input channel.


Capture Images Press the button on the top of joystick to capture images.

Clip Videos Press  to start clipping and press it again to stop clipping.

Scene Operation

You can switch the scene for a region or video wall.

Steps

1. Press **Num + REGION**, or press **Num + WALL**.
2. Select a monitor or window on touchscreen.
3. Select a scene as desired.
 - Tap  on the upper right corner and select a desired scene.

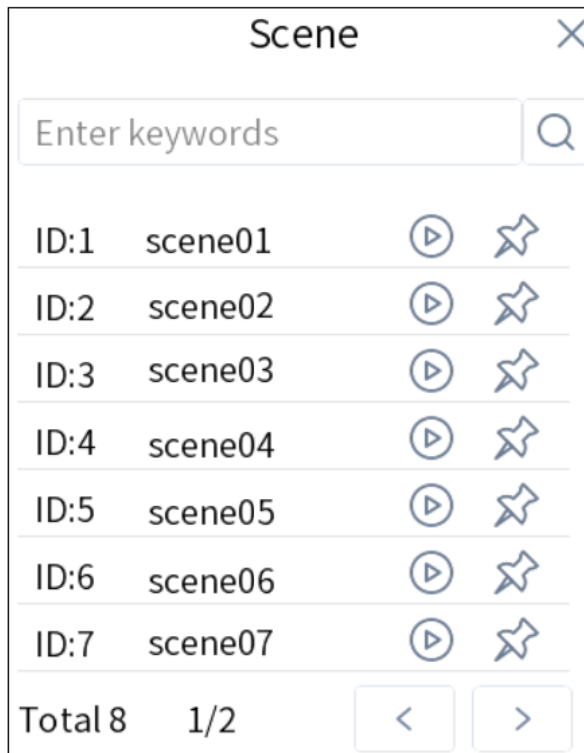





Figure 4-13 Scene

Table 4-2 Icon Description

Icon	Description
	Switch scene.
	Save scene.

Icon	Description
	<div data-bbox="564 293 687 338">  Note </div> <p data-bbox="564 353 1342 387">You can also press SET + Num + SCENE + SET to save scene.</p>

- Press **Num + SCENE** to switch scenes.

4.4.3 PTZ Control

You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease focus, increase/decrease iris, set/call preset, patrol and pattern.

Steps

1. Display speed dome image on video wall. For detailed steps, see [Window Operation](#).
2. Control PTZ. For detailed steps, see [PTZ Control](#).

4.4.4 Group and Macro

You can execute a series of continuous actions in sequence by calling a macro or group. Steps of setting group and macro are the same, we take setting and calling macro as the example to describe the steps.

Steps

1. Go to **Keyboard** → **Macro**.
2. Tap **+**.
3. Enter macro name.
4. Press keyboard buttons to enter commands.

Note

You can add up to 256 keys in one macro. A number may contain several keys, e.g., 369 contains 3 keys. A functional button is one key.

5. Tap **Save**.
6. Press **Num + MACRO** to call the macro.

4.5 Playback



4.5.1 Local Playback

Play videos on the touchscreen.

Instant Playback


Play videos in 3/5/10/15 minutes.

Steps

1. Start local live view. For detailed steps, see [Preview by Operating Touchscreen](#) and [Preview by Operating Keyboard Shortcut](#).
2. Use either of the following methods for instant playback:
 - Keyboard operation: Press . The system will replay recordings from a fixed duration prior to the current time. If no duration is set on the touchscreen, the default playback duration is 5 minutes. If a custom duration has been configured, playback will follow the configured duration.
 - Touchscreen operation: Tap , tap **Instant**, and choose the desired playback duration.

Playback by Time

Steps

1. Start local live view. For detailed steps, see [Preview by Operating Touchscreen](#) and [Preview by Operating Keyboard Shortcut](#).
2. Tap .
3. Tap **By Time**.
4. Select a day in calendar.

Playback Control

During playback, you can clip videos, capture images, control playback speed, etc.






Before You Start

You need to connect a USB flash drive or configure keyboard FTP settings. Clipped videos and captured pictures will be saved to USB flash drive or FTP server. For steps of storage configuration, see [Storage](#).

Note

DS-1100KI supports speed control via both outer shuttle and the joystick. DS-1105KI supports speed control via the joystick only.

Table 4-3 Button Description

Button	Description	Button	Description
Time bar	Drag time bar to quickly locate on a certain time to play.		Pause/resume playback.
	Stop playback.		Jump backward for 30 seconds.
	During playback, press it to start clipping. Press it again to stop clipping.		Jump forward for 30 seconds.
Outer shuttle	<ul style="list-style-type: none"> ● Rotate it clockwise for 2/4/8 times faster. ● Rotate it anticlockwise for 1/2, 1/4, or 1/8 times slower. 	Inner shuttle	Reserved
Capture	Press the button on the top of joystick to capture the images.	Joystick	<ul style="list-style-type: none"> ● Left: 1/2, 1/4, or 1/8 times slower. ● Right: 2/4/8 times faster. ● Clockwise: Jump forward for 30 seconds. ● Anticlockwise: Jump backward for 30 seconds.



4.5.2 Video Wall Playback

Play videos on video wall.

Instant Playback


Play videos in 3/5/10/15 minutes.

Steps

1. Start video wall live view. For detailed steps, see **Window Operation**.
2. Use either of the following methods for instant playback:
 - Keyboard operation: Press . The system will replay recordings from a fixed duration prior to the current time. If no duration is set on the touchscreen, the default playback duration is 5 minutes. If a custom duration has been configured, playback will follow the configured duration.
 - Touchscreen operation: Tap , tap **Instant**, and choose the desired playback duration.

Playback by Time

Steps

1. Start video wall live view. For detailed steps, see [Window Operation](#).
2. Tap , tap **By Time**, and select a day in calendar.

Playback Control

For detailed steps, see [Playback Control](#).

Note


Capturing, clipping, recording, jumping forward or backward for 30 seconds are not supported in **Video Wall Playback**.


4.6 Channel Management

4.6.1 Edit Channel

We take editing input channel as the example to describe the steps.

Steps

1. Go to **Keyboard** → **Channel**.
2. Tap  of input channel/output channel to edit.

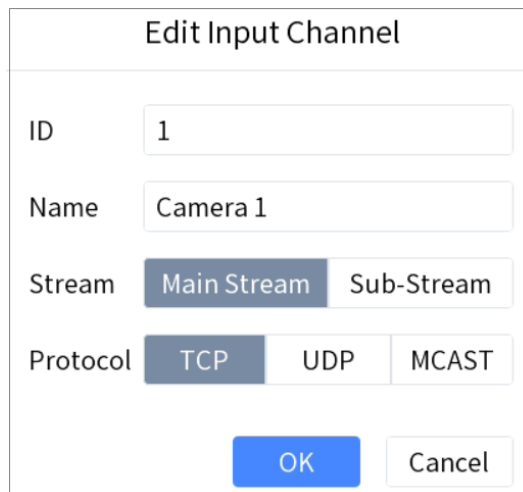

Edit Input Channel	
ID	<input type="text" value="1"/>
Name	<input type="text" value="Camera 1"/>
Stream	<input checked="" type="radio"/> Main Stream <input type="radio"/> Sub-Stream
Protocol	<input checked="" type="radio"/> TCP <input type="radio"/> UDP <input type="radio"/> MCAST
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Figure 4-14 Edit Input Channel

3. Edit parameters.

ID

The unique identification for input channel. It is valid in local and video wall live view mode.

Stream

The stream to preview in local and video wall live view mode.

Protocol

It is valid for video wall preview.

4. Tap **OK**.

4.6.2 Output Channel

When adding decoders or video recorders, their output channels will be added and displayed in output channel list. You can press **Num + MON** to operate an output channel, and the number refers to output channel ID. Video wall also need to link to these output channels.

Channel Management				
Input Channel	Output Channel	Camera Group	Enter keywords	Q
ID	Output Type	IP/Port	Region	Edit
1	BNC 01	192.168.1.1/8000	/	[Edit]
2	BNC 02	192.168.1.2/8000	/	[Edit]
3	BNC 03	192.168.1.3/8000	/	[Edit]
4	BNC 04	192.168.1.4/8000	/	[Edit]
5	BNC 05	192.168.1.5/8000	/	[Edit]
6	BNC 06	192.168.1.6/8000	/	[Edit]
7	BNC 07	192.168.1.7/8000	/	[Edit]
8	BNC 08	192.168.1.8/8000	/	[Edit]

Total 24 Page 1/3

Navigation: [K] [<] [>] [>|] [1] /3 [→]

Figure 4-15 Output Channel

4.6.3 Camera Group

Camera group enables you to preview a group of cameras (input channels) in sequence.

Steps

1. Go to **Keyboard** → **Channel** → **Camera Group**.

The screenshot shows the 'Channel Management' interface. At the top, there are tabs for 'Input Channel', 'Output Channel', and 'Camera Group'. Below the tabs is a search bar with the text 'Enter keywords' and a magnifying glass icon. The main content is a table with the following columns: ID, CAM-G Name, Channels, Interval (s), Edit, Link, Preview, and Delete. There are three rows of data in the table.

<input type="checkbox"/>	ID	CAM-G Name	Channels	Interval (s)	Edit	Link	Preview	Delete
<input type="checkbox"/>	1	1	5	10				
<input type="checkbox"/>	2	2	0	30				
<input type="checkbox"/>	3	123	0	30				

Figure 4-16 Camera Group

2. Tap .

The screenshot shows the 'Add CAM-G' dialog box. It has three input fields: 'ID' (with a greyed-out text box), 'Name' (with an empty text box), and 'Interval (s)' (with the value '30'). At the bottom, there are two buttons: 'OK' (in blue) and 'Cancel' (in white).

Figure 4-17 Add Camera Group

3. Enter group name and interval.

Interval: The time to dwell in each input channel before switching to next channel.

4. Tap **OK**.

5. Add input channel to camera group.

- Select a channel and tap on the right.
- Check input channels and tap on the upper-right corner.

<input type="checkbox"/>	ID	Channel Name	Num	IP/Port	Stream	Protocol	Link
<input type="checkbox"/>	1	Camera 1	1	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	2	BNC 07	2	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	3	DECODER VGA 01	1	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	4	DECODER DVI 01	65	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	5	DECODER VGA 01	2	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	6	DECODER DVI 01	1	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	7	ipc_12_你好	33	192.168.1.1/8000	Main Stream	TCP	
<input type="checkbox"/>	8	IPdome	1	192.168.1.1/8000	Main Stream	TCP	

Total 8 Page 1/1

Figure 4-18 Link Channel

Note

- Up to 16 camera groups can be added.
- Each camera group can link up to 64 input channels.
- Interval range: 10 to 65535 seconds.
- The camera groups set by different users are independent. Namely, users can only view and edit their own camera groups.

6. Optional: Tap **Linked Channel**, check input channels to be unlinked and tap to unlink the input channel.


4.7 User Management

Administrator can add operator and allocate devices to operator. Operator permissions are as follows:

- Add, edit, and delete macro and group.
- Add, edit, and delete region.
- Deleting, editing, and adding devices are not allowed.

Steps

1. Go to **Keyboard** → **System** → **User**.
2. Tap .
3. Enter user name and password for an operator, and tap **OK**.

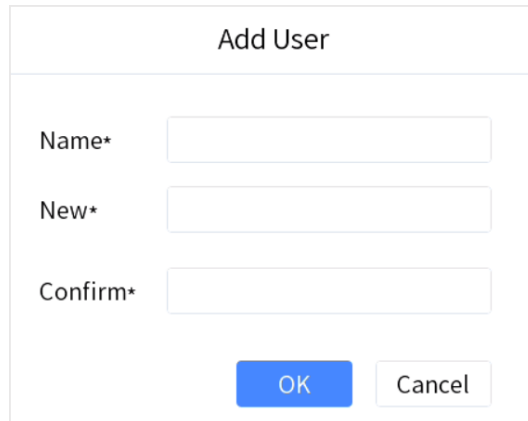



The screenshot shows a dialog box titled "Add User". It contains three text input fields, each with an asterisk indicating it is required: "Name*", "New*", and "Confirm*". Below the input fields are two buttons: a blue "OK" button and a white "Cancel" button with a grey border.

Figure 4-19 Add User

 **Caution**


- Passwords are divided into 4 types: digits, lowercase letters, uppercase letters, and special symbols. Passwords are classified into 4 levels:
 - Level 0 (risky password): password length < 8 or only one type of character.
 - Level 1 (weak password): password length ≥ 8 and two types of characters. The character combination includes digits + lowercase letters and digits+ upper case letters.
 - Level 2 (medium password): password length ≥ 8 and two types of characters. The character combination cannot be digits + lowercase letters or digits+ upper case letters.
 - Level 3 (strong password): password length ≥ 8 and three types of characters.
 - Do not use the risky passwords. To better protect your product, reset your password regularly.
 - The password cannot contain the user name in the forward order and backward order (when the user name length is more than 3), 123, admin (case insensitive), a string of at least four consecutive digits (such as 1234, 12345, 4321, etc.), a string of at least four repeating characters (such as 1111, 8888, aaaa, etc.).
 - The password cannot be 1qaz2wsx, 1qaz@WSX, !@#\$QWER, p@ssword, passw0rd, or p@ssw0rd.
-

4. Allocate devices to operator.

- Tap  of device to be linked.
 - Check devices as desired and tap  on the upper-right corner.
-

 **Note**

- Keyboard supports up to 32 users: 1 administrator and 31 operators.
 - The operator can only operate on the devices allocated.
-

5. Optional: Tap **Linked Device**, check the devices to be unlinked and tap  to unlink the devices.

4.8 Video Recorder

Control video recorder by operating video record remote panel.

4.8.1 Remote Panel

Press **Num + DEVICE** to show video recorder remote panel. Num refers to video recorder ID. Go to **Device** for video recorder ID.

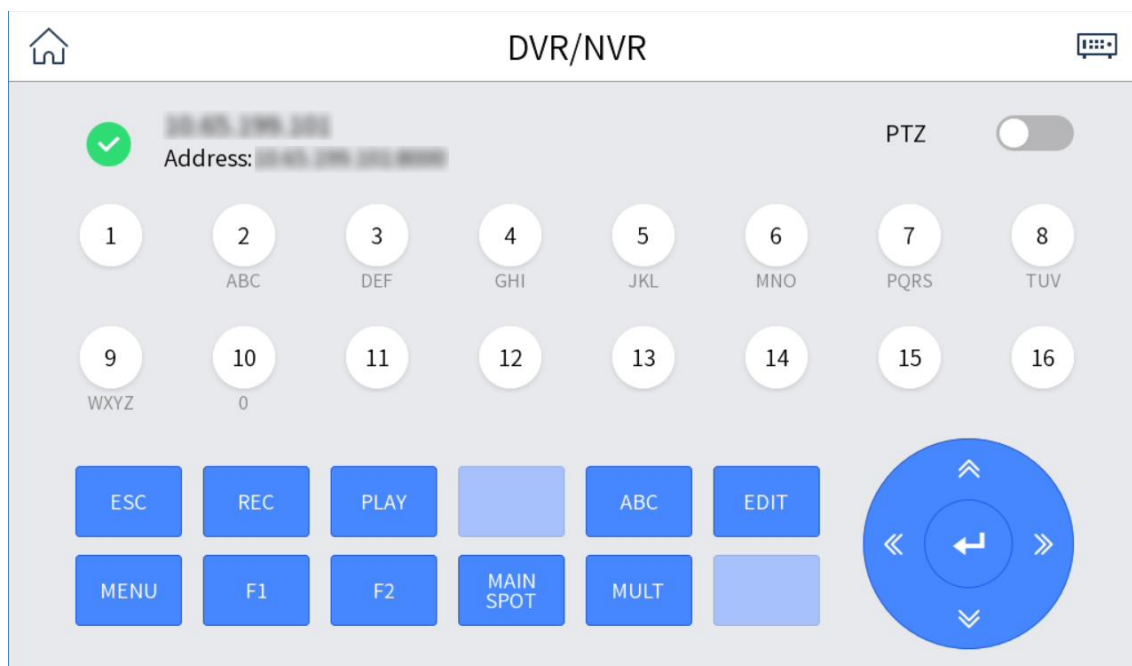






Figure 4-20 Remote Panel (Disable PTZ)

Table 4-4 Button Description

Button	Description
Disable PTZ	Exit PTZ control mode.
Numeric Key	<p>In editing mode, tap it to enter number 1 to 16. (When the number of channels to be controlled is a multiple of 10, e.g. 20, press 2 and then press 10.)</p> <ul style="list-style-type: none"> • In live view or PTZ mode, tap it to switch channel. • During playback, tap it to switch channel.
ESC	Exit the current menu.
REC	Start/stop manual recording.
PLAY	<ul style="list-style-type: none"> • In live view mode, tap it to enter Instant Playback interface. • During playback, tap it to select a day in the calendar.
ABC	In editing mode, tap it to switch input method among digits, letters, and

Button	Description
	characters.
EDIT	<ul style="list-style-type: none"> ● In editing mode, tap it to delete the content before the cursor. ● Check/uncheck a checkbox. ● In setting menu, tap it to enter editing mode.
MENU	<ul style="list-style-type: none"> ● Enter main menu interface. ● In second-level menu, tap it to go back to Live View interface. ● During playback, tap it to hide the control bar.
F1	<ul style="list-style-type: none"> ● During playback, tap it to switch between play and reverse play. ● In live view mode, tap it to start instant playback.
F2	<ul style="list-style-type: none"> ● Tap it to switch tab page. ● During playback, tap it to switch playback mode between playback by channel and playback by file. ● During simultaneous playback, tap it to switch channel.
MAIN/SPOT	Tap it to switch the output between main port and auxiliary port.
MULT	In live view mode, tap it to switch image division.
Directional Button	<ul style="list-style-type: none"> ● Move the active selection in a menu. Tap it to move the selection up and down. ● In live view mode, tap it to switch different channels. ● In playback mode: <ul style="list-style-type: none"> ○ Up (corresponds to  in playback menu): Tap it to speed up. ○ Down (corresponds to  in playback menu): Tap it to slow down. ○ Left (corresponds to  in playback menu): Tap it to switch to previous file/event/tag/day. ○ Right (corresponds to  in playback menu): Tap it to switch to next file/event/tag/day.
Enter	<ul style="list-style-type: none"> ● Confirm an operation. ● Check a checkbox and switch ON/OFF. ● During playback, tap it to stop/resume playback. ● In single frame playback mode, tap it to play next frame.

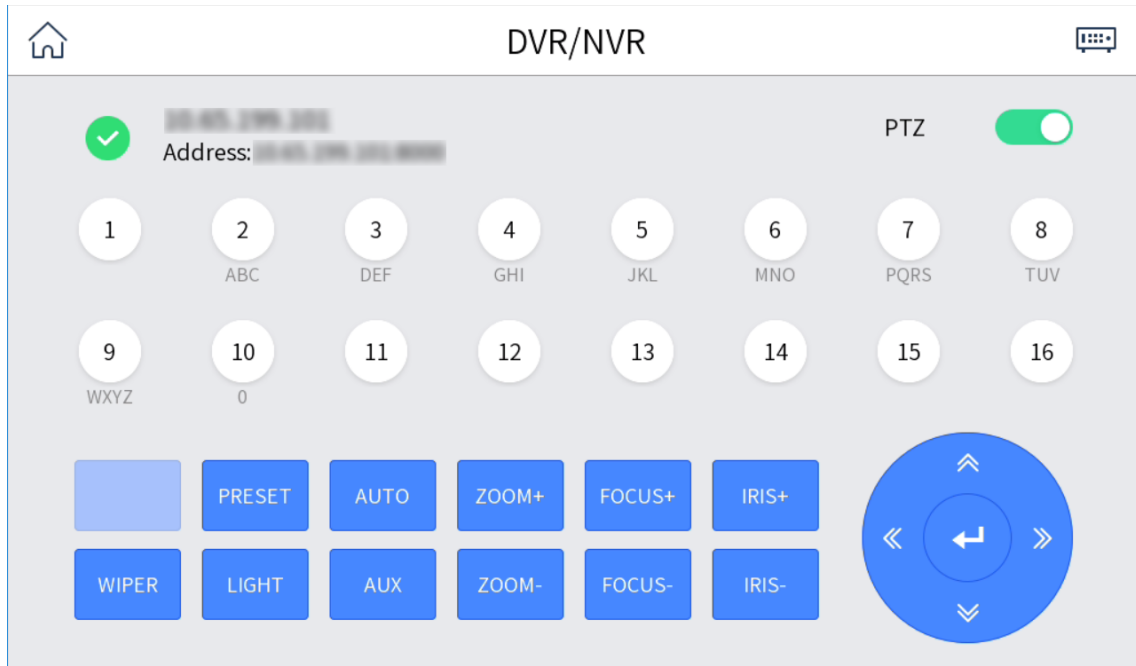


Figure 4-21 Remote Panel (Enable PTZ)

Table 4-5 Button Description

Button	Description
Enable PTZ	In PTZ live view mode, enable PTZ to enter PTZ control mode.
Numeric Button	Switch to the corresponding channel. (When the number of channels to be controlled is a multiple of 10, e.g. 20, press 2 and then press 10.)
PRESET	Tap PRESET + Num to call the preset.
AUTO	Enter auto-scan mode.
ZOOM+	Zoom in.
FOCUS+	Increase focus.
IRIS+	Increase iris.
WIPER	Turn on/off PTZ wiper.
LIGHT	Turn on/off PTZ light.
AUX	Reserved.
ZOOM-	Zoom out.
FOCUS-	Decrease focus.
IRIS-	Decrease iris.
Directional Button	Control PTZ movement.

Button	Description
Enter	In auto-scan mode, tap it to stop/resume auto-scan.

4.8.2 Live View

Video Recorder (Version before 4.0)

Whatever interface the video recorder is in, tap **ESC** till you enter the live view mode.

Video Recorder (Version: 4.0 and above)

Whatever interface the video recorder is in, tap **directional button** to enter the live view mode.

4.8.3 PTZ Control

You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, increase/decrease iris, increase/decrease focus, zoom in/out, call preset. But setting preset, setting and calling pattern, and setting and calling patrol are not supported.

General Operation

Operate the joystick and buttons to control PTZ.

Call a Preset

Tap **PRESET + Num** to call the preset.

4.8.4 Playback

Video Recorder (Version before 4.0)

In live view mode, tap **PLAY**.

Video Recorder (Version 4.0 and above)

- In live view mode, tap **PLAY**.
- In other menu, tap directional button to navigate to playback menu.

4.9 Connect the Device Through Serial Ports

The network keyboard can be connected to the device through RS-232 and RS-485 serial port. After the connection, the keyboard can be used to control the video recorder, analog dome and

analog matrix.

4.9.1 Connect Video Recorders

The keyboard can be connected to the video recorder through RS-485 serial port to realize preview, playback, PTZ control and other functions.

Steps

1. Connect the KB port of the video recorder with the RS-485 interface of the keyboard.

 **Note**

T+ and T- of RS-485 interface correspond to D+ and D- of KB port respectively.

2. Enter **Serial Port Control**, and select **DVR/NVR**.
3. Select **Device Address**.
4. Select **Device Version**.

 **Note**

- The device version is the firmware version of the corresponding device.
 - Please select according to the actual device version. Wrong version selection will cause some function exceptions.
-

5. Control video recorder through remote panel of video recorder. For details, see ***Remote Panel***.

 **Note**

You can only control the video recorder through the joystick and touchscreen, and the shortcut of network keyboard cannot be used to control the video recorder.

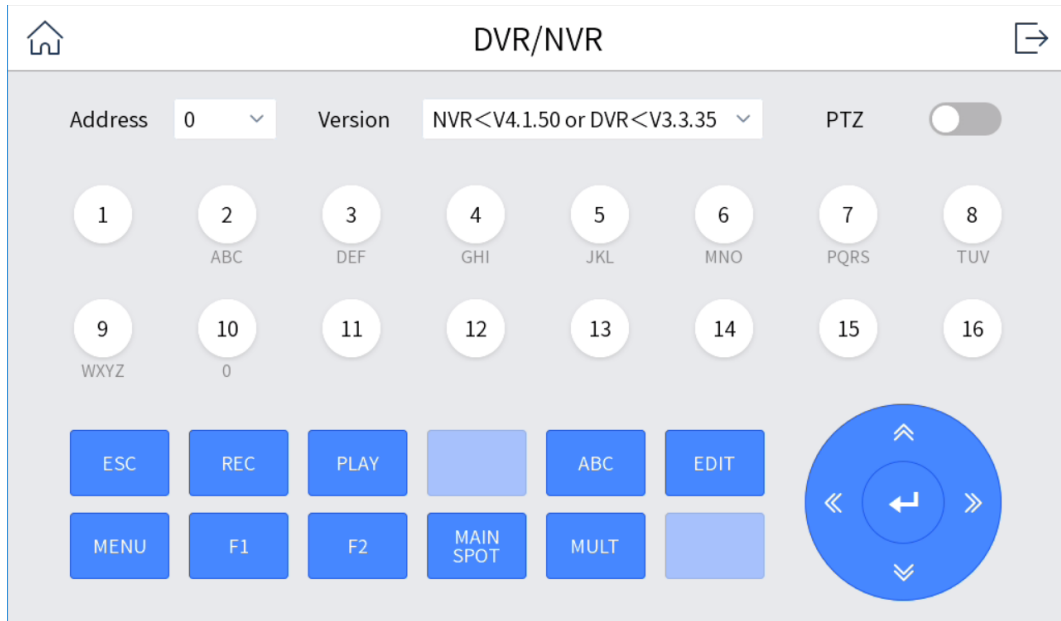


Figure 4-22 Connect Video Recorder (PTZ Disabled)

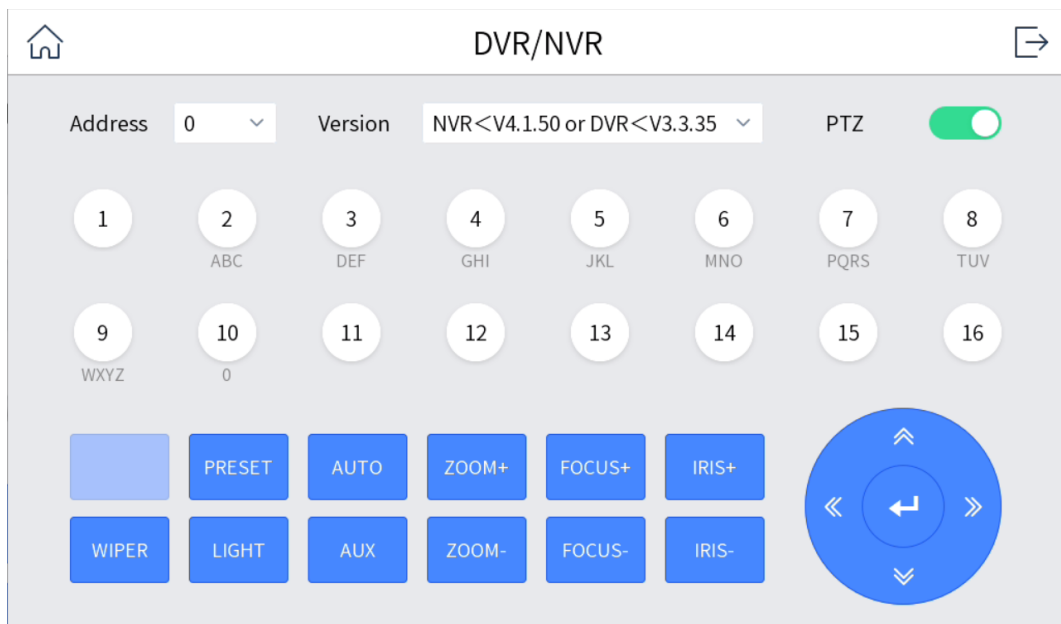


Figure 4-23 Connect Video Recorder (PTZ Enabled)

4.9.2 Connect Analog Matrix


The keyboard can be connected to the analog matrix through RS-232 serial port.


Steps

1. Connect the analog matrix to the RS-232 interface on the keyboard.

 **Note**

RS-232 interface uses the RJ-45 jack, whose pins 2, 3, and 7 represent RX, TX, and GND. When inserting an RJ-45 connector into the RS-232 interface, make sure RX, TX, and GND lines of the RS-232 interface are connected to TX, RX, and GND lines of the RJ-45 connector.

2. Enter **Serial Port Control**, select **Analog Dome/Analog Matrix**, and tap **OK**.
3. Tap  on the upper-right corner and select **RS232**.
4. Set the parameters of RS232 serial port.

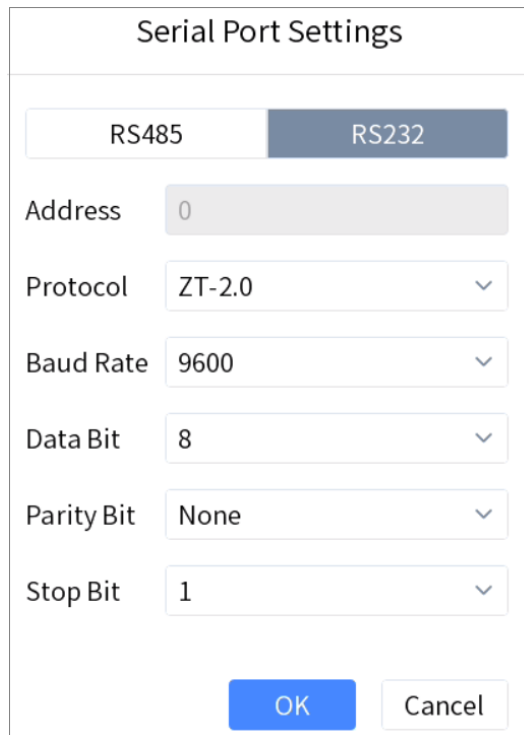

Serial Port Settings

RS485 RS232

Address 0

Protocol ZT-2.0

Baud Rate 9600

Data Bit 8

Parity Bit None

Stop Bit 1

OK Cancel

Figure 4-24 Setting Parameters of RS232 Serial Port

5. Optional: Switch one input port of the analog matrix to the output port.
 - 1) Part of the analog matrix needs to enter the device number in the keyboard.
 - 2) Press **1+MON**.
 - 3) Press **2+CAM** to switch the input port 2 to the output port 1.

4.9.3 Connect Analog Dome

The keyboard can be connected to the analog dome through RS-485 serial port to control PTZ

control, set and call preset, call patrol and pattern, etc.

Before You Start

Connect the analog dome to RS-485/RS-232 interface on the keyboard.

Steps

1. Tap **Serial Port Control**, select **Analog Dome/Analog Matrix** and tap **OK**.
2. Select a serial port.

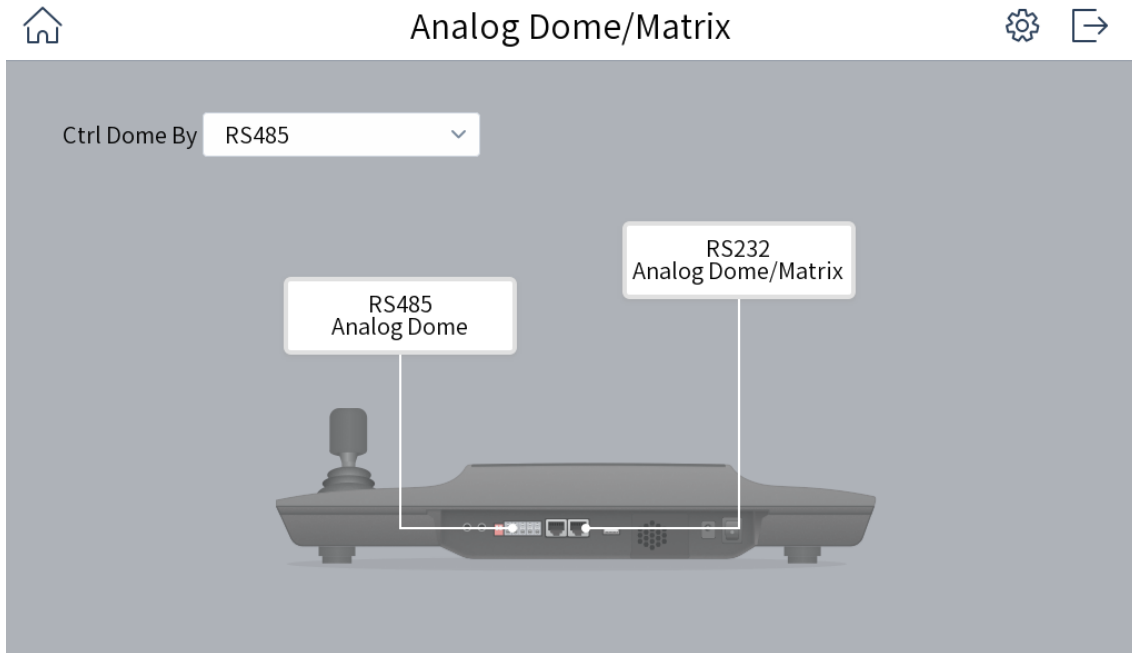



Figure 4-25 Select Serial Port

3. Tap  on the upper-right corner.
 - Set the parameters of RS-485 serial port.

The screenshot shows the RS485 configuration page. At the top, there are two tabs: 'RS485' (active) and 'RS232'. Below the tabs are several dropdown menus for configuration: Address Bit (0), Baud Rate (9600), Data Bit (8), Stop Bit (1), Parity (None), and Protocol (Pelco-P). A 'Copy to All' button is located to the left of the Protocol dropdown. The Protocol dropdown menu is open, showing a list of options: Private, Pelco-P (highlighted), Pelco-D, Vicon, Kalatel, and Visca.

Figure 4-26 Setting Parameters of RS-485 Serial Port

- Set the parameters of RS-232 serial port.

The screenshot shows the RS232 configuration page. At the top, there are two tabs: 'RS485' and 'RS232' (active). Below the tabs are several dropdown menus for configuration: Baud Rate (9600), Data Bit (8), Stop Bit (1), Parity (None), and Protocol (ZT-2.0). A red 'Save' button is located to the left of the Protocol dropdown. The Protocol dropdown menu is open, showing a list of options: Visca, ZT-1.0, ZT-2.0 (highlighted), Extron, Creator, Private, and Private_Ex.

Figure 4-27 Setting Parameters of RS-232 Serial Port

 **Note**

Among all RS-232 protocols, only Visca supports the control of analog domes.

4. Press **NUM+CAM** and select analog dome.

 **Note**

One RS-485 serial port can be connected to multiple analog domes. The longer the serial port cable is, the fewer analog domes can be connected at the same time.

5. Control PTZ through the joystick.

 **Note**

- Setting and calling preset, and calling patrol and pattern are supported. For details, see **PTZ Control**.
 - Calling and setting patrol are supported, and the specific number of analog domes supported varies with the protocols of the analog domes.
-

Chapter 5 iSecure Mode

5.1 Login

Steps

1. Tap **iSecure** at home page.

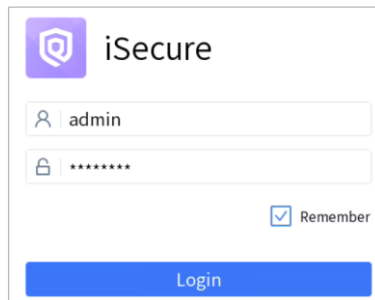


Figure 5-1 Log in to iSecure

2. Tap **Server IP** on the upper right corner.

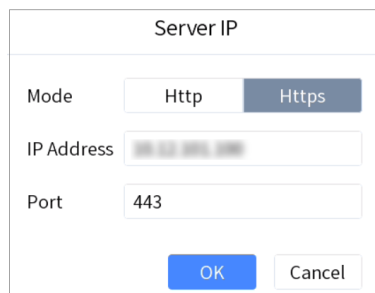


Figure 5-2 Server IP Configuration

3. Select **Http** or **Https** as the login mode.
4. Enter the IP address and port No. of the server, and tap **OK**.
5. Enter the user name and password of the server.
6. Optional: Check **Remember**.
7. Tap **Login**.

Note

- After several failed login attempts, you need to enter verification code. The details are subject to the actual interface.
- When you attempt to log into the platform for the first time, you will be prompted to log into the client first.
- If a platform is cascaded with other platforms, you can view all cameras and video walls of the platform and its cascading platforms when you log in to the platform through the

keyboard.

- Different users have different kinds of permissions. Please refer to the messages on the interface.

5.2 Resource List

Resource list interface appears after you log in to iSecure. Resource list contains control center, region, video wall, and camera. Tap a control center or region, you can view its subordinate control center, region, and camera.

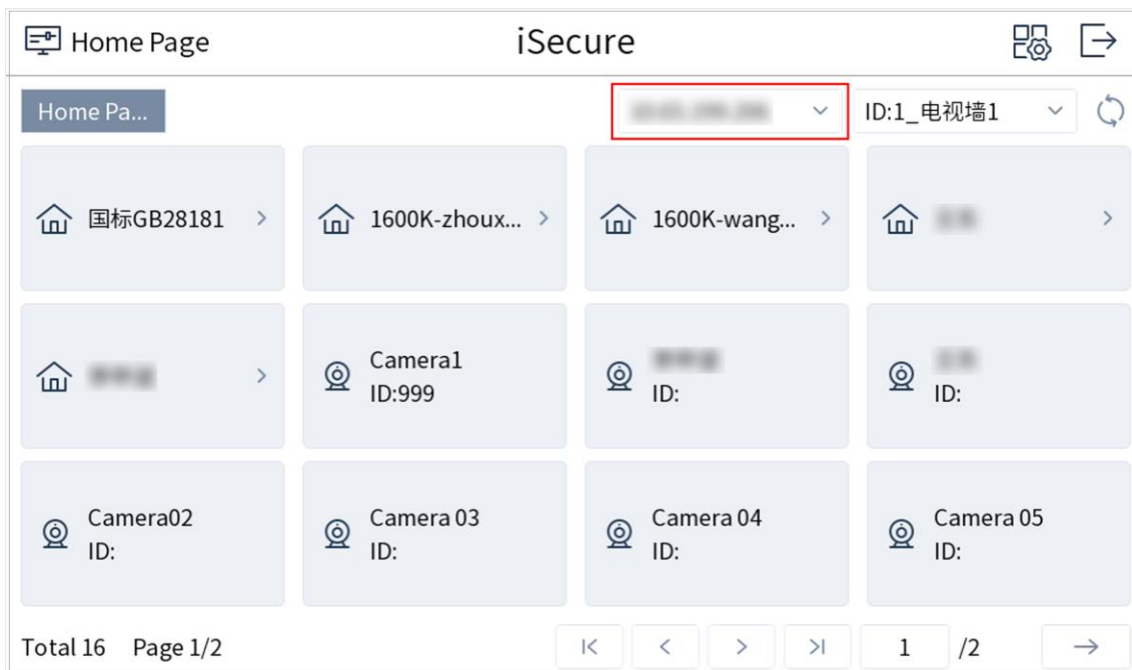


Figure 5-3 Resource List (iSecure)

- Tap the drop-down list on the upper right corner to view video wall ID and select a video wall. Tap the drop-down list in the red box to select TVMS server.
- Tap to select a control center or region to view its subordinate camera ID.
- The camera ID can be only edited in the platform client. For details, please refer to the user manual of the platform.


5.3 Local Live View

You can preview the cameras on iSecure platform on the touchscreen.

5.3.1 Enable Local Live View

Preview the images of cameras by operating keyboard shortcut.


Steps

1. Press **0 + MON** to enter local live view.
2. Preview operations.
 - Press **Num + CAM** to perform the preview operation.
 - Select  on the upper-right corner on the touchscreen, and select a channel under the node to display.
3. During preview, switch channels, capture images, or clip videos.

- 4-Window Preview**
- Press **4 + MULT** to switch the current image into 4 windows, and tap any window to preview more cameras.
 - Press **1 + MULT** to return to the previous image.

Switch Channels Press **PREV/NEXT** to switch to the previous or next channel.

Capture Images Press the top of the joystick to capture an image.

Clip Videos Press  to start clipping and press it again to stop clipping.

5.3.2 PTZ Operation

You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease iris, increase/decrease focus, set and call preset, and call patrol/pattern.



For detailed steps, see [**PTZ Control**](#).

5.4 Video Wall Operation

5.4.1 Region Configuration

The whole video wall can be divided into different regions.

Steps

1. Tap  on the upper-right corner.
2. Tap .

Add Region

Video Wall*

Start Row*

Column*

End Row*

Column*

Figure 5-4 Add Region

3. Enter video wall ID, start and end coordinates.
4. Tap **OK**.

Note

- Up to 16 regions are supported.
 - The maximum region specification is 6 × 8.
 - If you do not configure the region, region 1 will be set correspond to video wall 1, region 2 to video wall 2, and region 16 to video wall 16 by default.
-

5.4.2 Video Wall Control

- Select a coordinate grid that has been linked with an output interface, and perform operations such as opening a window, closing a window, resizing a window, and dividing a window.
- Select a video wall to switch scenes and display the current layout.
- Switch the designated camera to the designated monitor or sub-window of the video wall.
- Do not support camera group.

For detailed steps, see [**Video Wall Control**](#).

5.4.3 PTZ Operation


You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease iris, increase/decrease focus, set and call preset, call patrol/pattern.

For detailed steps, see [**PTZ Control**](#).

5.5 Video Wall Playback

On the keyboard video wall, you can play back video files from cameras on iSecure platform.

Note

- You can play back video files from the central or local cameras by choosing **Central Storage** or **Local Storage** after tapping . Some operations in the process of playback are not supported. Please follow the interface prompt messages.
 - Only playback from VNSC components of the platform through standard RTSP is supported.
 - The progress bar will be displayed during playback. You can drag the progress bar back and forth to view the playback image.
-

Method 1

1. Press **Num + REGION** to select a region, or press **Num + WALL** to select a wall.
2. Tap to select a window to start playback. For detailed steps, see [***Video Wall Playback***](#).

Method 2

1. Select a wall in the wall list.
2. Press **Num + MON**.
3. Select a channel with records to start playback.

Chapter 6 HikCentral Mode

The keyboard is accessible to HikCentral platform, and the images of the cameras accessible to HikCentral platform can be displayed on the video wall and previewed locally.

6.1 Login

Steps

1. Tap **HikCentral** at home page.

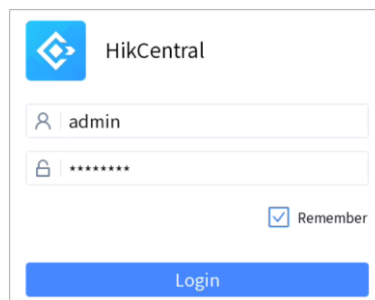


Figure 6-1 HikCentral Login

2. Tap **Server IP** on the upper right corner.

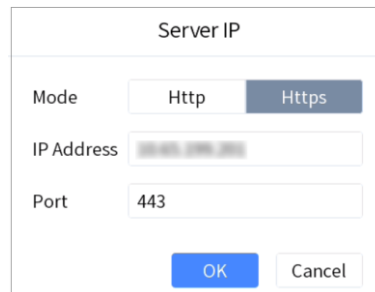


Figure 6-2 Configure Server IP (HikCentral)

3. Select **Http** or **Https** as the login mode.
4. Enter server IP address and port, and tap **OK**.
5. Enter server user name and password.
6. Optional: check **Remember**.
7. Tap **Login**.

Note

After several failed login attempts, you need to enter verification code. The login attempt times are decided by platform.

6.2 Resource List

Resource list interface appears after you log into HikCentral platform. Resource list contains control center, region, video wall, and camera. Tap a control center or region, and you can view its subordinate control center, region, and camera.

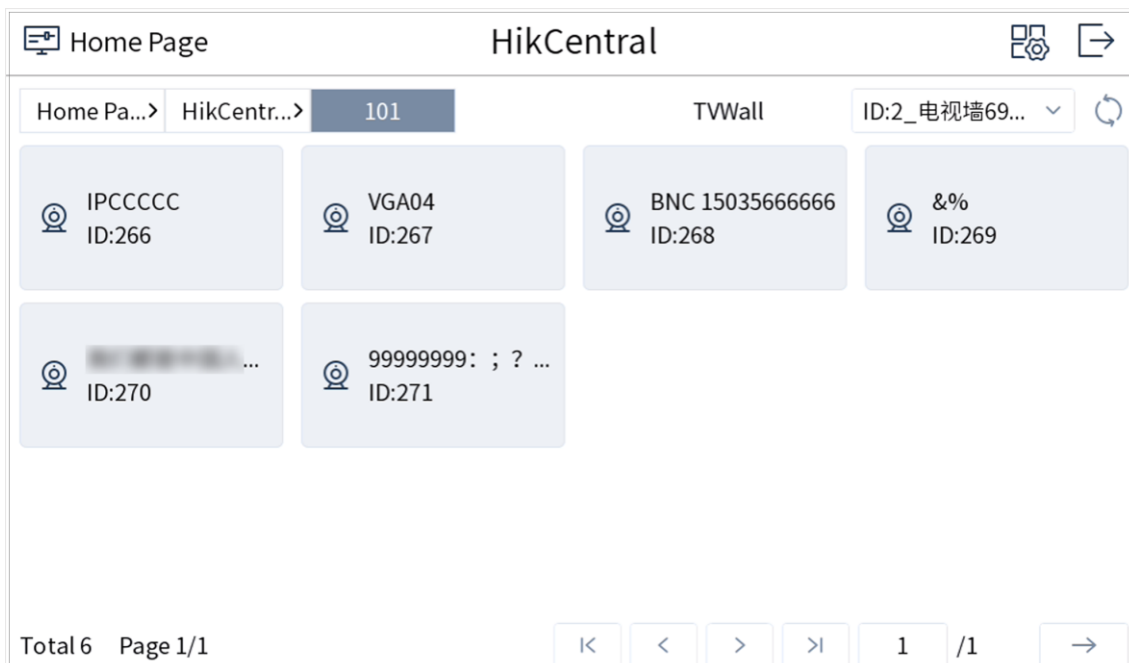



Figure 6-3 Resource List (HikCentral)

- Tap the dropdown list on the upper right corner to view video wall ID and select a video wall.
- Tap  on the upper right corner to divide the whole video wall into regions.
- Select a site, and tap to select a control center or region to view its subordinate camera ID.
- The camera ID can be only edited in the platform client.


6.3 Local Live View

You can preview the cameras on HikCentral platform on the touchscreen.

6.3.1 Enable Local Live View

Preview the images of cameras by operating keyboard shortcut.

Steps

1. Press **0 + MON** to enter local live view.
2. Preview operations.
 - Press **NUM + CAM** to perform the preview operation.
 - Select  on the upper-right corner on the touchscreen, and select a channel under the node to preview.

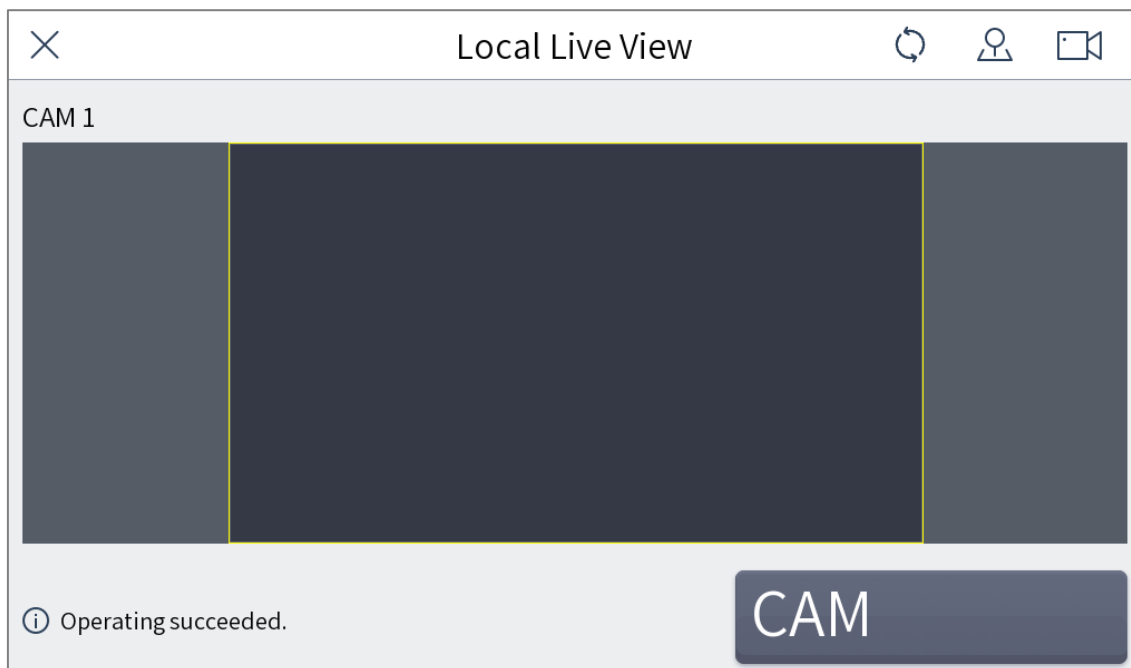



Figure 6-4 Local Live View

3. During preview, use the joystick to control the pattern of PTZ.
4. During preview, switch channels, capture images, or clip videos.

- 4-Window Preview**
- Press **4 + MULT** to switch the current image into 4 windows, and tap any window to preview more cameras.
 - Press **1 + MULT** to return to the previous image.

Switch Channels Press **PREV/NEXT** to switch to the previous or next channel.

Capture Images Press the top of the joystick to capture an image.

Clip Videos Press  to start clipping and press it again to stop clipping.

Note

In HikCentral interface, press **Num + CAM** to control PTZ without previewing the images from speed domes.

6.3.2 PTZ Operation

You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease iris, increase/decrease focus, set and call preset, and call patrol/pattern.



For detailed steps, see [PTZ Control](#).


6.4 Video Wall Operation

6.4.1 Region Configuration

The whole video wall can be divided into different regions for management.

Steps

1. Tap  on the upper-right corner.
2. Tap .

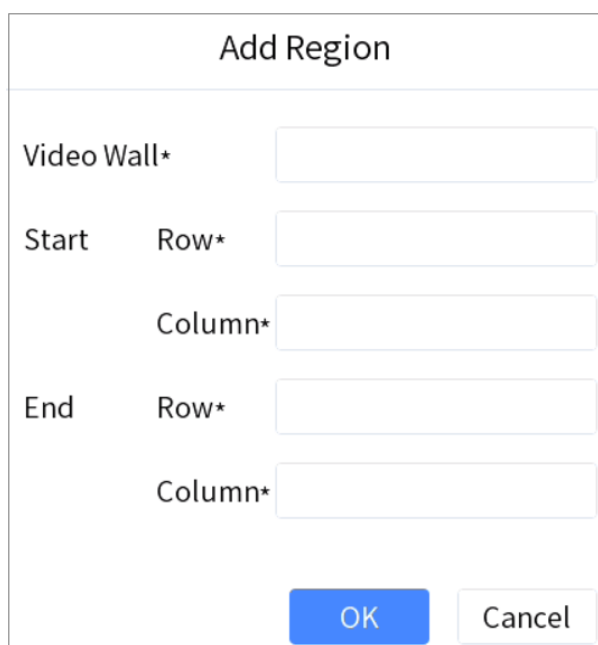

The screenshot shows a dialog box titled "Add Region". It contains the following fields and buttons:

- Video Wall***: A text input field.
- Start**:
 - Row***: A text input field.
 - Column***: A text input field.
- End**:
 - Row***: A text input field.
 - Column***: A text input field.
- OK**: A blue button.
- Cancel**: A white button with a grey border.

Figure 6-5 Add Region

3. Enter video wall ID, start and end coordinates.
4. Tap **OK**.

Note

- Up to 16 regions are supported.
 - The maximum region specification is 6 × 8.
 - If you do not configure the region, region 1 will be set correspond to video wall 1, region 2 to video wall 2, and region 16 to video wall 16 by default
-

6.4.2 Video Wall Control

- When you press **Num + CAM** to preview, the stream type adapts to the platform by default. But you can switch the stream type.
- Select a coordinate grid that has been linked with an output interface, and perform operations

such as opening a window, closing a window, resizing a window, and dividing a window.

- For LED video walls, you can open a window or batch open windows by tapping icons on the upper right corner.
- Select a video wall to switch scenes and display the current layout.
- Switch the specified camera to the specified monitor or sub-window of the video wall.
- Do not support camera group.

For detailed steps, see [***Video Wall Control***](#).

Note

In HikCentral mode, the top joystick button is used for tagging instead of taking screenshots.

6.4.3 PTZ Operation

You can control the added speed dome, like control PTZ movement, turn on/off light, turn on/off wiper, zoom in/out, increase/decrease iris, increase/decrease focus, set and call preset, call patrol/pattern.

For detailed steps, see [***PTZ Control***](#).

6.5 Video Wall Playback

On the keyboard video wall, you can play back video files from cameras on HikCentral platform.

Note

- Local storage and device storage are supported.
 - Fast playback, slow playback, and pause/resume playback are supported. The progress bar will be displayed during playback. You can drag the progress bar back and forth to view the playback screen.
-

Method 1

1. Press **Num + REGION** to select a region, or press **Num + WALL** to select a wall.
2. Tap to select a window to start playback. For detailed steps, see [***Video Wall Playback***](#).

Method 2

1. Select a wall in the wall list.
2. Press **Num + MON**.
3. Select a channel with records to start playback.

Chapter 7 System

Tap **System** at home page to enter system interface. You can configure keyboard network, hardware, time, etc.

Note

Restoring default settings, importing/exporting configuration files, and remote upgrades require the administrator password to be verified.

7.1 Language

Select **System** → **Maintenance** → **Language** to view the language.

7.2 Hardware

Go to **System** → **Hardware**, and set the following parameters.

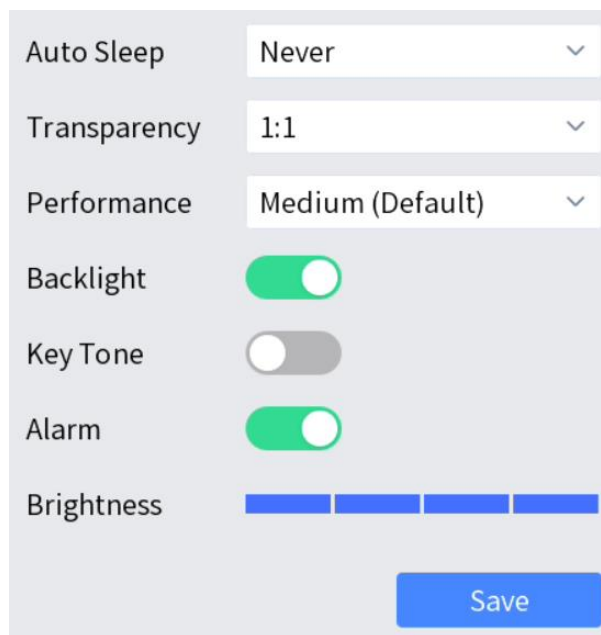


Figure 7-1 Hardware Parameters (DS-1100KI)

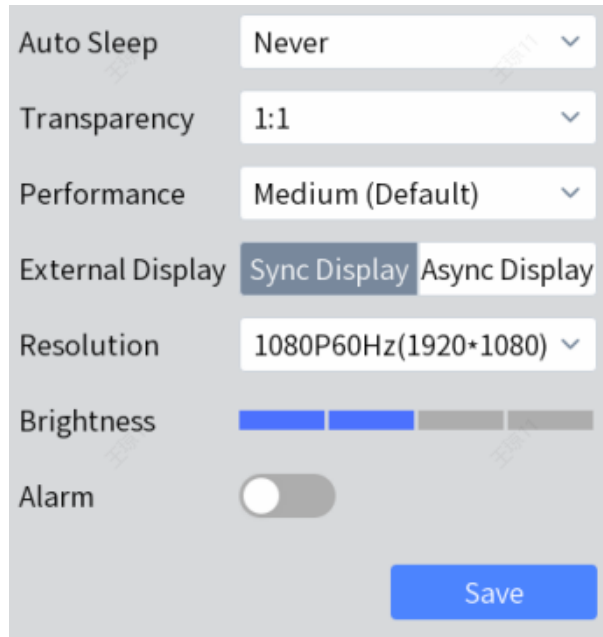


Figure 7-2 Hardware Parameters (DS-1105KI)

Transparency

Select menu transparency. Available only in local live view.

Performance

You can select minimum delay, medium (default) or default according to the actual network.

Alarm

Keyboard alarms when network disconnected or IP conflicted.

7.3 Storage

7.3.1 FTP Storage

Captured images and clipped videos will be saved to FTP server. And when you upgrade keyboard via FTP server, the upgrade file from FTP server will be uploaded to the keyboard.

Before You Start

Build a FTP server.

Steps

1. Go to **System** → **Storage** → **FTP**.

The screenshot shows a configuration window for FTP storage. At the top, there are two tabs: 'FTP' (which is selected and highlighted in blue) and 'USB'. Below the tabs are five input fields: 'IP Address' (with a blurred value), 'Folder' (empty), 'User Name' (with a blurred value), and 'Password' (with three asterisks). A blue 'Save' button is located at the bottom right of the window.

Figure 7-3 FTP Storage

2. Configure FTP server information.

- **IP Address:** IP address of FTP server.
- **Folder:** The folder name to be created in FTP server.
- **User Name and Password:** User name and password of FTP server.

 **Note**

The following special characters are not allowed: / \ : * ? ' " < > | %.

3. Tap **Save**.

7.3.2 USB Storage

Save captured images and clipped videos in USB flash drive.

Steps

1. Go to **System** → **Storage** → **USB**.
2. Tap **Save**.

7.4 Upgrade

You are recommended to upgrade your keyboard under the help of professional technical support.

Export configuration file of the keyboard before upgrade.

For detailed steps, see [**Import/Export Configuration File**](#).

7.4.1 FTP Upgrade

Steps

1. Configure FTP server. For detailed steps, see [**Storage**](#).

2. Turn on FTP server and input upgrade file into FTP root folder.
3. Go to **System** → **Maintenance** and select FTP upgrade.
4. Enter admin password to confirm.

7.4.2 USB Flash Drive Upgrade

Steps

1. Save upgrade file in USB flash drive.
2. Connect USB flash drive to keyboard USB interface.
3. Go to **System** → **Maintenance** and select USB Flash Drive upgrade.
4. Enter admin password to confirm.

7.5 Import/Export Configuration File

You can export the configuration file to the computer or import the configuration file from the computer to the keyboard. In case of keyboard failure, you need to back up the data by exporting the configuration file first, and then repair the failure. When you need to copy the data of this keyboard to another keyboard, you can also import/export the configuration file.

Steps

1. Go to **System** → **Maintenance**.
2. Import/export configuration file.
 - Import Configuration File:
 - Tap **Import**.
 - Enter admin password.
 - Select the database file (kbConfig) to import.
 - Export Configuration File:
 - Tap **Export**.
 - Enter admin password.
 - Select the folder to export configuration file (kbConfig).

7.6 Factory Default

Restore keyboard to factory default settings.

Go to **System** → **Maintenance**.

- **Simple**: Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.
- **Complete**: Restore all settings to factory default settings.

7.7 Auxiliary Key

You can set F1 or F2 as **Two-way Audio** or **Enlarge/Restore Sub-Window**. If users at the keyboard side want to have an audio call with users at the device side, set an auxiliary key as two-way audio to enable audio call.

7.8 Lock Keyboard

Steps

1. Hold **LOCK** for 3 seconds to exit to home page and lock keyboard.
2. Press **LOCK** again to unlock keyboard.

7.9 Joystick Sensitivity

Go to **System** → **Other**, and select the joystick sensitivity.

Chapter 8 Web Configuration

You can add devices, manage channels or configure basic parameters through the web interface of the network keyboard. It is convenient to remotely configure and maintain the network keyboard.

8.1 Login

Before You Start

Ensure that the network keyboard is connected to the network and the IP address of the network keyboard is obtained.

Steps

1. Open the browser, enter the IP address of the network keyboard (HTTPS://IP address) in the address bar, and enter the login interface.

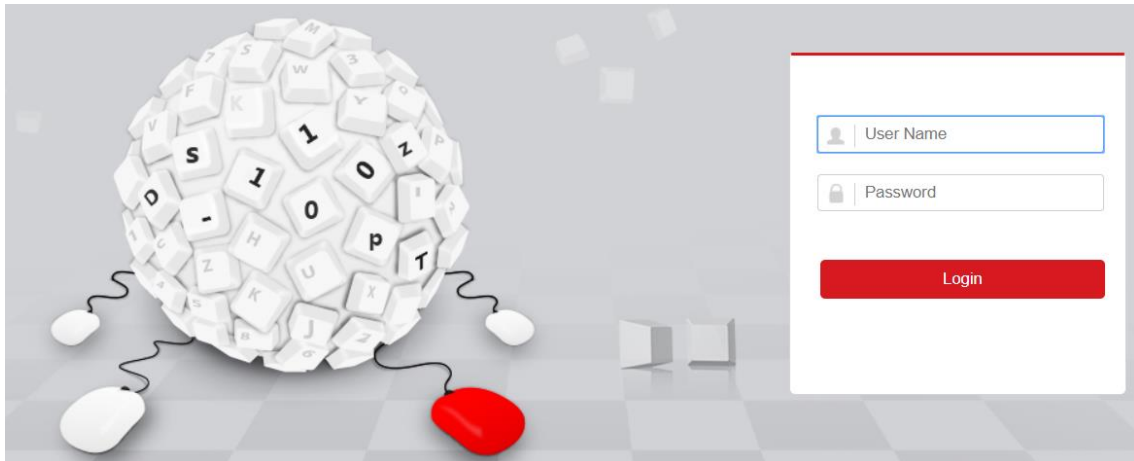


Figure 8-1 Login

2. Enter user name and password.
3. Click **Login**.

8.2 Add Devices

8.2.1 Manually Add

When the network keyboard is used as the control center and you select the keyboard operation mode, add the device first according to this section.

Steps

1. In **Device Management** interface, select to add **Center Device** or **IPC/Network Dome**.

2. Click **Add**, select to add devices by IP address or IP segment, and enter **IP Address**, **Port**, **User Name** and **Password**, and select protocol type.

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The "Adding Mode" section has two radio buttons: "IP" (which is selected) and "IP Segment". Below this are several input fields: "Device Name", "IP Address", "Port", "User Name", "Password", and "Verification Code". A "Protocol" dropdown menu is set to "Default". At the bottom right, there are "OK" and "Cancel" buttons.

Figure 8-2 Add Device by IP Address

The screenshot shows a dialog box titled "Add Device" with a close button (X) in the top right corner. The "Adding Mode" section has two radio buttons: "IP" and "IP Segment" (which is selected). Below this are several input fields: "Start IP", "End IP", "Port", "User Name", "Password", and "Verification Code". A "Protocol" dropdown menu is set to "Default". At the bottom right, there are "OK" and "Cancel" buttons.

Figure 8-3 Add Device by IP Segment

 **Note**


- It takes a long time to add devices by IP segment. Please wait patiently.
- After adding devices in IP segment mode, you need to refresh manually to get the added devices.

3. If you enable stream encryption for the device, you need to enter the verification code when adding the device by IP address.
4. Check or uncheck **Add Video Recorder Output** as desired.

 **Note**

Check **Add Video Recorder Output**, and the output port type, channel number and other information will be listed in the output port list.

5. Optional: In **Device Management** interface, click **Add SADP**, enter user name and password, check the device to be added, and click **OK** to add online devices on the same network segment.

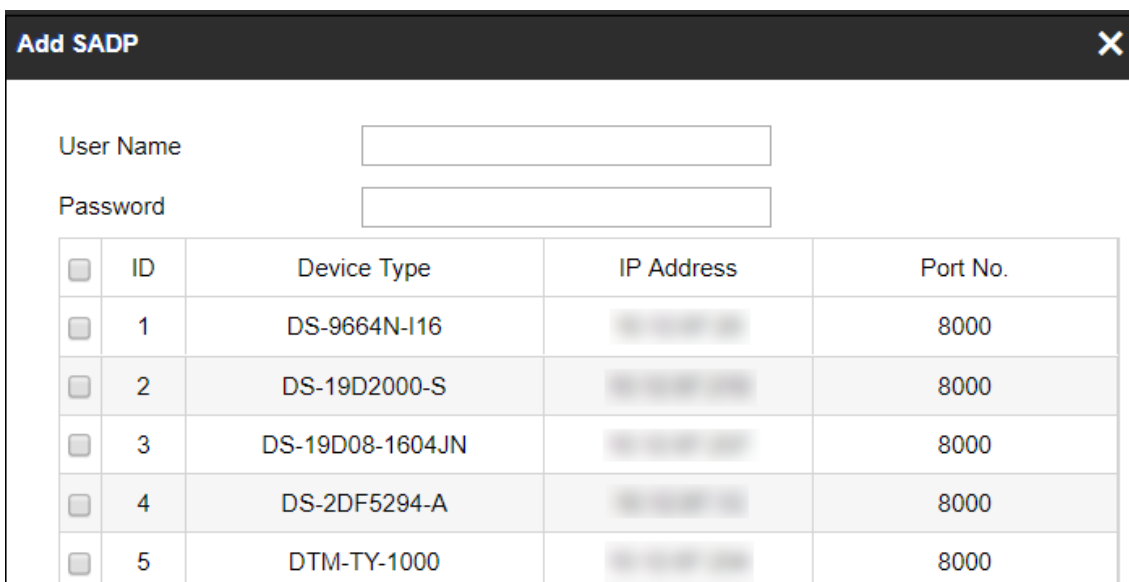

<input type="checkbox"/>	ID	Device Type	IP Address	Port No.
<input type="checkbox"/>	1	DS-9664N-I16	192.168.1.1	8000
<input type="checkbox"/>	2	DS-19D2000-S	192.168.1.2	8000
<input type="checkbox"/>	3	DS-19D08-1604JN	192.168.1.3	8000
<input type="checkbox"/>	4	DS-2DF5294-A	192.168.1.4	8000
<input type="checkbox"/>	5	DTM-TY-1000	192.168.1.5	8000

Figure 8-4 Add SADP

 **Note**

- SADP search can only add devices in the same network segment.
- After adding devices in batches by SADP, you need to refresh manually to get the added devices.

8.2.2 Import Input Channels in Batches

Before You Start

1. Add several devices manually. Go to **Channel Management** → **Input Channel**, click **Export**, enter password, and then export channel information.
2. Edit the device channel information based on the exported template, and save the exported channel information into the local PC.

Steps

1. Go to **Channel Management** → **Input Channel**.
2. Click **Import**.



Figure 8-5 Import Input Channel in Batches

3. Click **Browse** and select the imported template.
4. Enter password and click **OK**.
The channels in the template will be added into network keyboards.

8.3 Channel Management

8.3.1 Edit Channel


Steps

1. Go to **Channel Management** → **Input Channel**.

Note

Input and output channels can be edited. This section takes input channels as an example.

2. Select the input channel to be edited and click **Edit**.

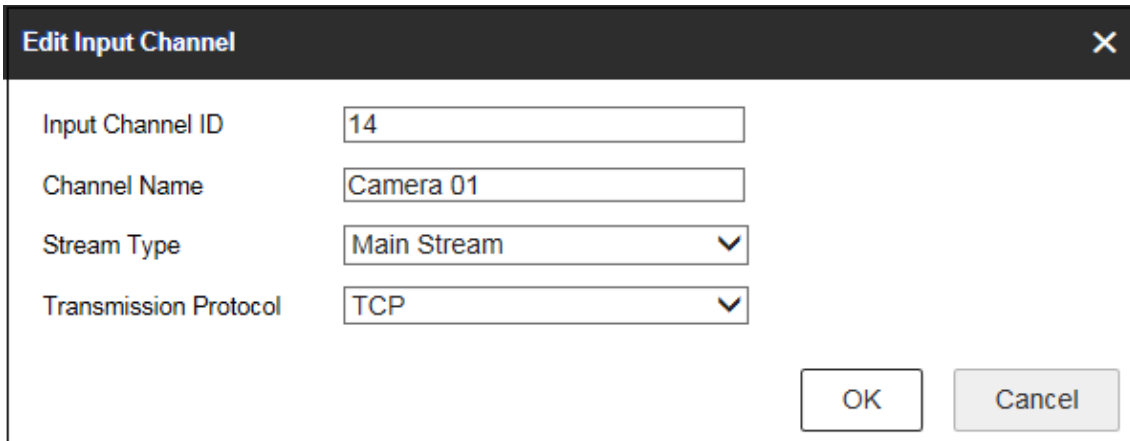

The screenshot shows a dialog box titled "Edit Input Channel" with a close button (X) in the top right corner. The dialog contains the following fields:

- Input Channel ID:** A text input field containing the number "14".
- Channel Name:** A text input field containing "Camera 01".
- Stream Type:** A dropdown menu with "Main Stream" selected.
- Transmission Protocol:** A dropdown menu with "TCP" selected.

At the bottom right of the dialog are two buttons: "OK" and "Cancel".

Figure 8-6 Edit Input Channel

3. Edit channel parameters.

Input Channel ID

Each input channel corresponds to a unique number, which is valid for video wall and local live view.

Stream Type

Code stream for local live view and video wall preview.

Transmission Protocol

Available for video wall preview.

4. Click **OK**.

8.3.2 Camera Group

Camera group enables you to preview a group of cameras (input channels) in sequence.

Steps

1. Go to **Channel Management** → **Camera Group**.
2. Click **Add**.

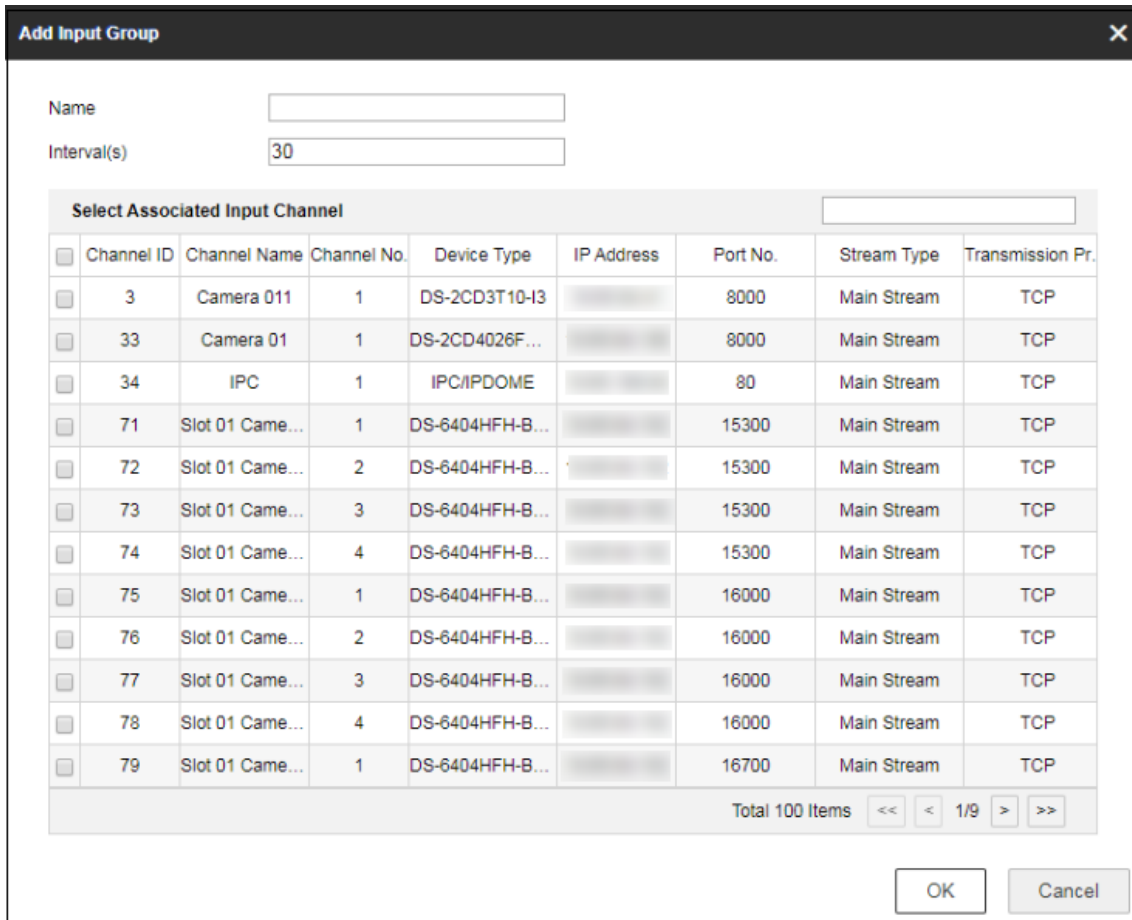


Figure 8-7 Add Camera Group

3. Enter **Name** and **Interval(s)**.
4. Check input channels to be linked and click **OK**.

Note

- Up to 16 camera groups can be added.
- Each camera group can link up to 64 input channels.
- Interval range: 10 to 65535 seconds.
- The camera groups set by different users are independent. Namely, users can only view and edit their own camera groups.


5. Click **Edit** in **Camera Group** interface, uncheck input channels to be unlinked and click **OK** to unlink the input channel.

8.4 Serial Port Settings

RS-485 and RS-232 serial port parameters can be set in the **Serial Port Settings** interface. You can set baud rate, data bit, protocol type, stop bit, parity and other parameters of RS232 and RS485,

edit the address of RS485 serial port, and copy RS485 serial port settings to all.

- Configure the parameters of RS-485 port when the serial port is connected to analog dome.
- Configure the parameters of RS-232 port when the serial port is connected to the analog matrix.

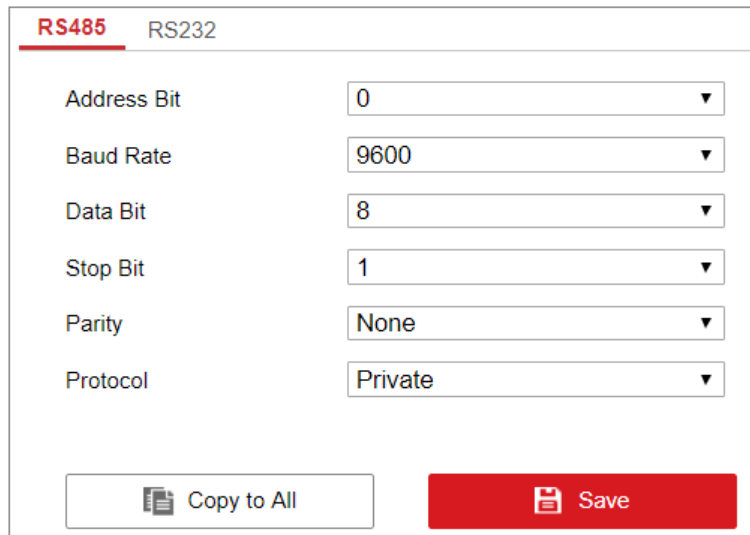


The screenshot shows the 'RS485' settings tab selected. The interface includes the following fields and buttons:

Parameter	Value
Address Bit	0
Baud Rate	9600
Data Bit	8
Stop Bit	1
Parity	None
Protocol	Private

Buttons: Copy to All, Save

Figure 8-8 RS485 Serial Port Settings

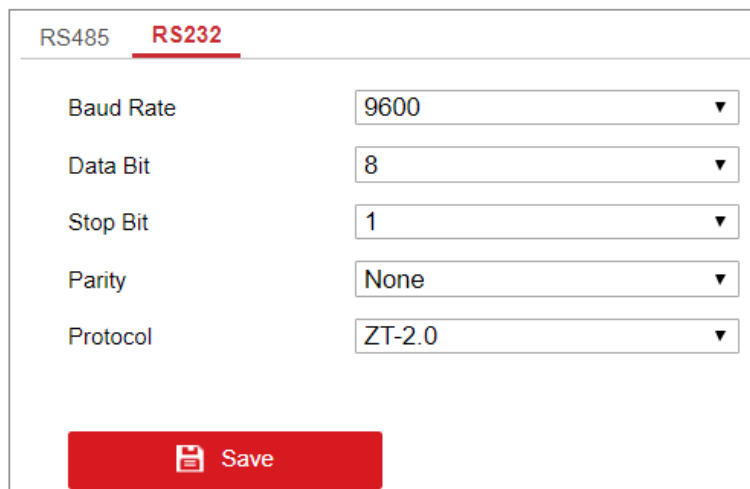

The screenshot shows the 'RS232' settings tab selected. The interface includes the following fields and buttons:

Parameter	Value
Baud Rate	9600
Data Bit	8
Stop Bit	1
Parity	None
Protocol	ZT-2.0

Buttons: Save

Figure 8-9 RS232 Serial Port Settings

8.5 Network

Steps

1. Select **Network Management** at the main interface.
2. Configure network parameters.
 - Check **DHCP** to obtain IP address and related network parameters automatically.
 - Uncheck **DHCP** and enter IP address, gateway, subnet mask.
3. Click **Save**.

The screenshot shows a web interface titled "IP Address Settings". At the top, there is a red header with the text "IP Address Settings". Below the header, there are several configuration options: "DHCP" with a checked checkbox and the text "Enable"; "IP Address" with a text input field; "Gateway" with a text input field; "Subnet Mask" with a text input field; and "Mac Address" with a text input field. At the bottom of the form, there is a red button with a white floppy disk icon and the text "Save".

Figure 8-10 Network Parameters

8.6 System Settings

8.6.1 Version

Go to **System Management** → **Version** to view system version information, including device type, serial No., firmware version, decoding version, MCU version and web version.

The screenshot shows a web interface titled "Version" with a sub-tab "About". Below the header, there are several fields for version information: "Device Model" with a text input field; "Serial No." with a text input field; "Firmware Version" with a text input field; "Decoding Version" with a text input field; "MCU Version" with a text input field; and "Web Version" with a text input field.

Figure 8-11 Version Information

8.6.2 User Management

Administrator can add operator and allocate devices to operator. Operator permissions are as follows:

- Add, edit, and delete macro and group.
- Add, edit, and delete region.
- Deleting, editing, and adding devices are not allowed.

Steps

1. Go to **System Management** → **User Management**.
2. Click **Add**.

Add User
✕

User Name

Admin Password

Password

8 to 16 characters allowed, including at least 2 of the following types: upper-case letters, lower-case letters and digits.

Confirm Password

Select Associated Device Select All

<input type="checkbox"/>	ID	Device Type	IP Address	Port No.
<input type="checkbox"/>		IPC/DS-2CD4232F...	192.168.1.100	8000
<input type="checkbox"/>		IPC/DS-2CD4824F...	192.168.1.101	8000
<input type="checkbox"/>		IPC/DS-2CD3T25-I3	192.168.1.102	8000
<input type="checkbox"/>		IPC/DS-2CD883F-E	192.168.1.103	8000

Selected 0 Total 4 Items
 <<
<
1/1
>
>>

OK
Cancel

Figure 8-12 Add User

3. Enter user name and password for an operator, and click **OK**.

 **Caution**

- Passwords are divided into 4 types: digits, lowercase letters, uppercase letters, and special symbols. Passwords are classified into 4 levels:
 - Level 0 (risky password): password length < 8 or only one type of character.
 - Level 1 (weak password): password length ≥ 8 and two types of characters. The character combination includes digits + lowercase letters and digits+ upper case letters.
 - Level 2 (medium password): password length ≥ 8 and two types of characters. The character combination cannot be digits + lowercase letters or digits+ upper case letters.
 - Level 3 (strong password): password length ≥ 8 and three types of characters.
 - Do not use the risky passwords. To better protect your product, reset your password regularly.
 - The password cannot contain the user name in the forward order and backward order (when the user name length is more than 3), 123, admin (case insensitive), a string of at least four consecutive digits (such as 1234, 12345, 4321, etc.), a string of at least four repeating characters (such as 1111, 8888, aaaa, etc.).
 - The password cannot be 1qaz2wsx, 1qaz@WSX, !@#\$QWER, p@ssword, passw0rd, or p@ssw0rd.
-

4. Check devices to be linked as desired and click **OK**.

 **Note**

- Keyboard supports up to 32 users: 1 administrator and 31 operators.
 - The operator can only operate on the devices allocated.
-

5. Optional: Click **Edit**, uncheck the devices to be unlinked and click **OK** to unlink the devices.

8.6.3 System Maintenance

Go to **System Management** → **System Maintenance** to restart the device, restore defaults, export/import configuration file, etc.

 **Note**

Restoring default settings, importing/exporting configuration files, and remote upgrades require the administrator password to be verified.

Restart

You can restart the network keyboard.

Restore Defaults

- **Simply Restore:** Keep the activation state (administrator password) and the network parameters of the network keyboard, and the remaining parameters will be restored to the default settings.
- **Completely Restore:** Completely restore the parameters to default settings.

Import/Export Configuration File

You can export the configuration file to the computer or import the configuration file from the computer to the keyboard. In case of keyboard failure, you need to back up the data by exporting the configuration file first, and then repair the failure. To copy the data of this keyboard to another keyboard, you can also import/export the configuration file.

Note

- Please set the key for the configuration file when exporting it.
 - The configuration file encrypted and exported is named as configurationdata.
 - If the configuration file is encrypted, you need to enter the key of the configuration file when importing it.
-

Remote Upgrade

Click **Browse** to select the upgrade file in the computer, and click **Upgrade** to upgrade the network keyboard remotely.

Note

The upgrade file must be named as digicap.dav.

8.6.4 Log Management

Go to **System Management** → **System Maintenance** → **Log**, select the major and minor types and

start and end time of the log, and then search and export the log.

The screenshot shows the 'Log' section of the System Maintenance interface. It features a search area with dropdown menus for 'Major Type' and 'Minor Type', both set to 'All Types'. There are input fields for 'Start Time' (2019-11-07 00:00:00) and 'End Time' (2019-11-07 23:59:59), along with 'Search' and 'Export' buttons. Below the search area is a table with the following data:

SN	Time	Major Type	Minor Type	Local/Remote User	Remote Host IP	Description
1	2019-11-07 09:44:29	Operation	Power On			
2	2019-11-07 10:21:18	Operation	Local: Login	admin		Keyboard
3	2019-11-07 10:21:26	Operation	Local: Delete the device	admin		Del DEV[10.65....
4	2019-11-07 10:21:27	Operation	Local: Delete the device	admin		Del DEV[10.65....
5	2019-11-07 10:21:28	Operation	Local: Delete the device	admin		Del DEV[10.65....
6	2019-11-07 10:21:28	Operation	Local: Delete the device	admin		Del DEV[10.65....
7	2019-11-07 10:21:28	Operation	Local: Delete the device	admin		Del DEV[10.65....
8	2019-11-07 10:21:29	Operation	Local: Delete the device	admin		Del DEV[10.65....
9	2019-11-07 10:21:33	Operation	Local: Delete the device	admin		Del DEV[10.65....
10	2019-11-07 10:21:34	Operation	Local: Delete the device	admin		Del DEV[10.65....
11	2019-11-07 10:30:12	Operation	Local: Add the device	admin		Add DEV[10.65....
12	2019-11-07 10:30:39	Operation	Local: Add the device	admin		Add DEV[10.65....

At the bottom of the table, it indicates 'Total 42 Items' and includes navigation buttons: '<<', '<', '1/1', '>', and '>>'.

Figure 8-13 View Logs

8.6.5 Security Settings

Go to **System Management** → **Security Settings**, and enable or disable SSH and SADP.

- SSH is disabled by default after the network keyboard is restarted.
- When you enable SADP, the keyboard can be searched. When you disable SADP, the keyboard cannot be searched.



See Far, Go Further

UD44571B-A